



SERVICE PARTS LIST

BULLETIN NO.
54-10-0253

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		
SUPER HAWG®		
CATALOG NO. 1680-20	STARTING SERIAL NUMBER	407D

REVISED BULLETIN	DATE
54-10-0252	April 2021
WIRING INSTRUCTION 58-01-0696	


00 0

EXAMPLE:

Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

★=Part number change
from previous service
parts list.


**FOR TOOLS WITH A FAILED MOTOR PINION (ITEM #26)
OR 1ST INTERMEDIATE GEAR (ITEM #45), REPAIR WITH
SERVICE KIT 14-30-0390.**

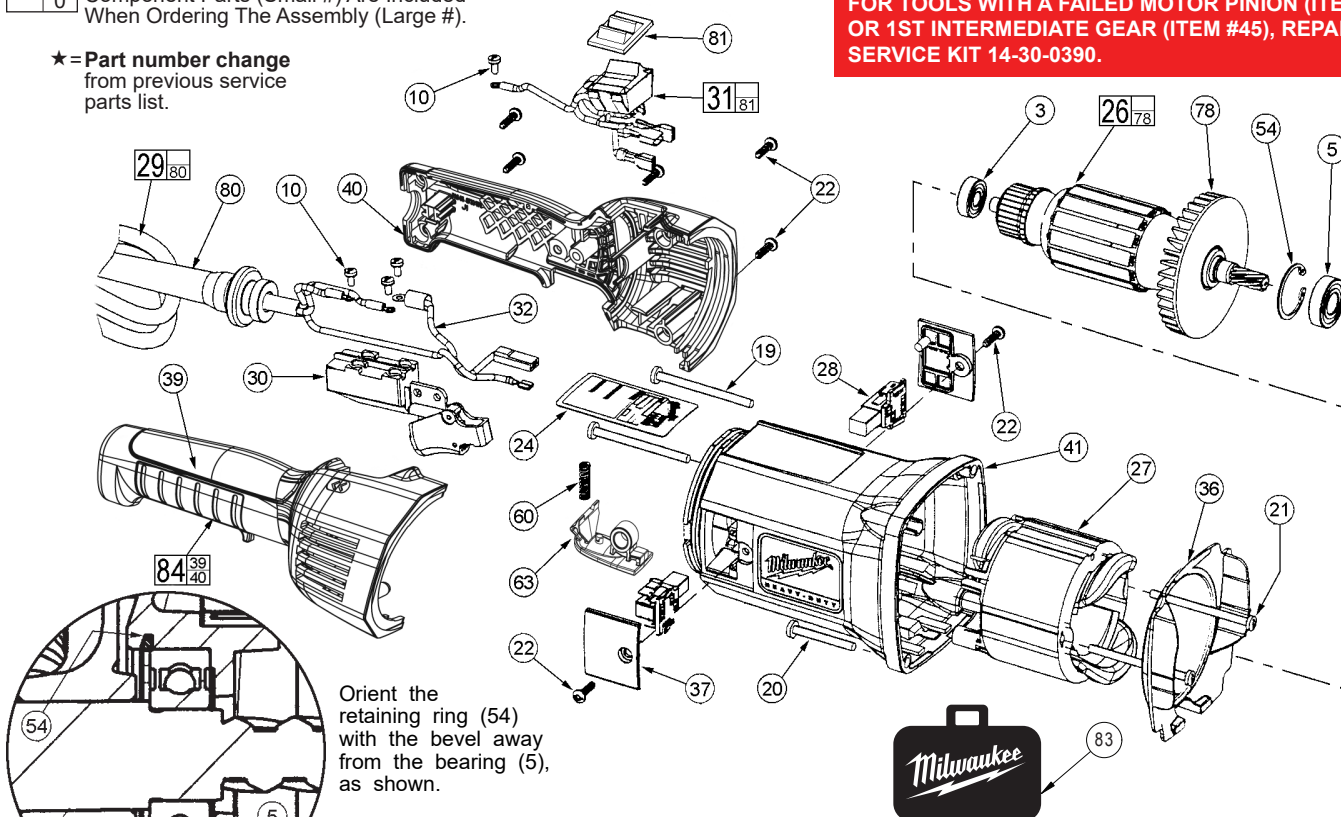

Orient the retaining ring (54)
with the bevel away
from the bearing (5),
as shown.

SERVICE DETAILS FOR PARTS ON THE BACK PAGE

Orient the bearing
retainer (67) with the
offset away from the
bearing (4), as shown.

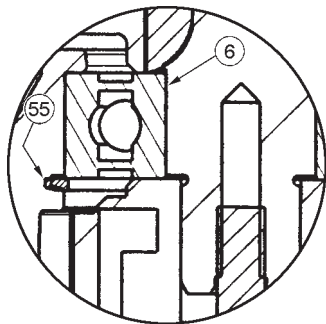

Orient the retaining
ring (55) with the
bevel facing away
from the bearing (6),
as shown.

Orient the pin (15) with the
rounded end facing up,
as shown.

Orient the retaining ring (53)
with the barbs facing up,
as shown.

Insert the straight end of the
spring (61) into the hole in the
bottom of the shift disk (64).

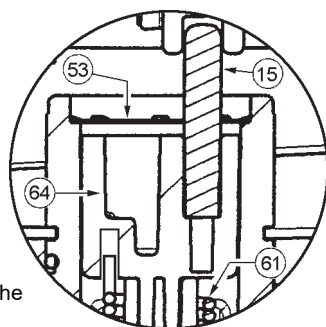
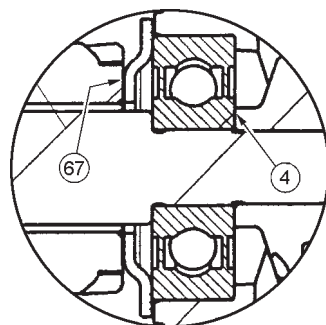


FIG.	PART NO.	DESCRIPTION OF PART	QTY.
3	02-04-0852	Ball Bearing	(1)
5	02-04-1204	Ball Bearing	(1)
10	05-78-0305	M3.5 x 0.6 x 7mm Pan Hd. Slotted T-15	(4)
19	06-82-5554	10-24 x 2.375 Taptite T-25	(2)
20	06-82-5584	10-24 x 1.50 Taptite T-25	(2)
21	06-82-7375	8-16 x 2.50 Slotted Plastite T-20	(2)
22	06-82-9220	K40 x 5/8 Slotted PT T-20	(7)
24	12-98-7305	Service Nameplate	(1)
26	16-50-1095	Armature Assembly	(1)
27	18-50-1095	Field	(1)
28	22-20-0150	Brush Holder Assembly	(2)
★ 29	22-64-1260	Cord Assembly	(1)
30	23-66-2270	On/Off Switch	(1)
★ 31	23-66-2365	Reversing Switch Assembly	(1)
32	23-94-2270	Lead Wire Assembly	(1)
36	31-05-0240	Baffle	(1)
37	31-15-0595	Brush Cover	(2)
★ 39	-----	Handle Half - Right	(1)
★ 40	-----	Handle Half - Left	(1)
41	31-50-1780	Motor Housing with Trace	(1)
54	34-80-2021	Beveled Internal Retaining Ring	(1)
60	40-50-0265	Rotation Button Spring	(1)
★ 63	42-42-0491	Rotation Release Button	(1)
78	22-84-0085	Fan	(1)
80	44-76-0355	Cord Protector	(1)
81	42-38-0280	Rocker Boot	(1)
83	48-55-1680	Accessory Carrying Case	(1)
★ 84	31-44-2167	Handle Kit	(1)

**SEE REVERSE
SIDE**

★=Part number change
from previous service
parts list.

**Fig. 23, No. 32-10-1058
Clutch Assembly-** has
been "calibrated" at the
factory and requires no
"run-in".

LUBRICATION NOTES:

Type 'Y' Grease No. 49-08-5270,
6oz./170g tube

The entire amount of two tubes will be needed.
or

Type 'Y' Grease No. 49-08-5275, 14oz./396g tub (can)

When servicing, remove 90-95% of existing grease
prior to installing Type 'Y'. Original grease may be
similar in color but not compatible with 'Y'.

DO NOT wash Clutch Hub Assembly #23.
Prior to reinstalling, clean gear assemblies
with a clean dry cloth.

Fill the gear cavity of the gear
case (33) with 8.5 oz. of grease.

Fill the spindle cavity of the gear
case (33) with 3.5 oz. of grease.

Lightly grease o-ring (49)
before assembling to the
shift knob (66).

FIG.	PART NO.	DESCRIPTION OF PART	QTY.
2	02-02-1300	5mm Ball	(2)
4	02-04-1055	Ball Bearing	(1)
6	02-04-2031	Ball Bearing	(1)
7	02-50-7000	Needle Bearing	(3)
8	02-50-7005	Needle Bearing	(1)
9	02-80-0180	Thrust Needle Bearing	(2)
11	05-88-9915	M5 x 1.23 x 25mm Pan Hd. DG T-25	(2)
12	06-42-0800	Woodruff Key	(1)
13	06-42-1900	Woodruff Key	(2)
14	06-42-2400	Woodruff Key	(1)
15	06-65-2010	Dowel Pin	(1)
16	06-75-3150	1/4-20 x 1 LH Socket Hd. Screw	(1)
17	06-82-5360	1/4-20 x .625 Taptite T-30	(2)
18	06-82-5411	10-24 x .625 Taptite T-25	(4)
23	32-10-1058	Clutch Assembly	(1)
33	28-14-2546	Gearcase Assembly	(1)
34	28-20-2600	Gearcase Cover	(1)
35	28-28-2185	Diaphragm Assembly	(1)
38	31-44-2060	Gearcase Front Handle	(1)
42	32-05-1516	Spiral Bevel Gear	(1)
43	32-05-1521	Spiral Bevel Pinion	(1)
45	32-42-1380	1st Intermediate Gear	(1)
46	32-42-1400	1st Intermediate Gear - High	(1)
47	32-44-1340	2nd Intermediate Gear - High	(1)
48	34-40-0230	Gearcase Seal	(1)
49	34-40-4545	O-Ring	(1)
50	34-40-4550	O-Ring	(1)
51	34-60-1450	E-Ring	(1)
53	34-80-1800	Internal Retaining Ring	(1)
55	34-80-2980	Internal Beveled Retaining Ring	(1)
56	36-18-0585	Intermediate Shaft	(1)
57	36-66-1225	1st Intermediate Pinion - Low	(1)
58	38-50-4460	Spindle	(1)
61	40-50-8585	Torsion Spring	(1)

SCREW/CHUCK TORQUE CHART		
FIG.	PART NO.	SEAT TORQUE
10	05-78-0305	4-10 In.-Lbs.
74	Chuck	80-90 Ft.-Lbs.

Note: Chuck Assembly No. 48-66-1381
comes with a washer that is not to
be used when servicing this tool.

FIG.	PART NO.	DESCRIPTION OF PART	QTY.
62	40-50-8690	Detent Spring	(2)
64	43-06-0696	Shifting Disk Assembly	(1)
66	43-98-0665	Shifting Knob	(1)
67	44-86-0040	Bearing Retainer	(1)
68	44-86-0045	Retaining Fork	(1)
69	44-90-0575	Shifting Ring	(1)
70	45-12-0625	Gearcase Insulator	(1)
72	45-88-0395	Thrust Washer	(4)
74	48-66-1381	Chuck	(1)
75	48-66-3280	Chuck Key (Not Shown)	(1)
76	48-66-4040	Chuck Key Holder (Not Shown)	(1)
77	49-15-0151	Side Handle Assembly (Not Shown)	(1)
82	34-40-1680	Screw Gasket	(2)