
WIRING INSTRUCTIONS

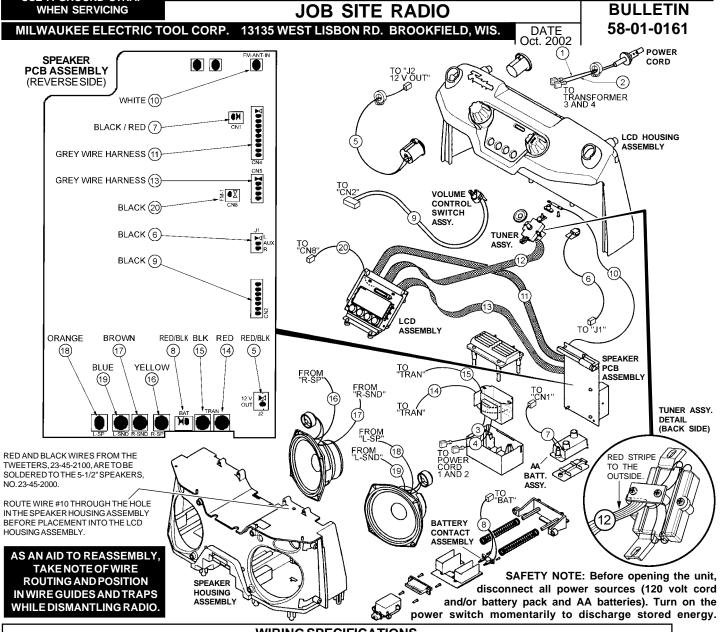

| WIRING SPECIFICATIONS | | | | |
|-----------------------|---------------|--------------------|--------|--|
| Wire No. | Wire Color | Origin or Gauge | Length | Terminals, Connectors and 1 or 2 End Wire Preparation |
| 1 | Black | 22-64-0980 | | Component of cord set. |
| 2 | White | 22-64-0980 | | Component of cord set. |
| 3 | Red | 23-81-0545 | | Component of the transformer assembly. |
| 4 | Red | 23-81-0545 | | Component of the transformer assembly. |
| 5 | Red/Blk | 45-34-0151 | | Component of the 12 volt socket assembly. |
| 6 | Black | 45-34-0160 | | Component of the auxiliary socket assembly. |
| 7 | Red/Blk | 31-50-1195 | | Component of the AA battery assembly. |
| 8 | Red/Blk | 22-09-1651 | | Component of the battery contact assembly. |
| 9 | Black | 23-66-0740 | | Component of the volume control switch assembly. |
| 10 | White | 22-09-1545 | | Component of the speaker PCB assembly. Soldered to "FM-ANT-IN". |
| 11 | Grey | 22-09-1575 | | Component of the PCB on the LCD assembly. |
| 12 | Grey | 42-42-0500 | | Component of the PCB on the tuner assembly. |
| 13 | Grey | 22-09-1575 | | Component of the PCB on the LCD assembly. |
| 14 | Red | 23-81-0545 | | Component of the transformer assembly. Soldered to the "+" on the PCB. |
| 15 | Black | 23-81-0545 | | Component of the transformer assembly. Soldered to the "-" on the PCB. |
| 16 | Yellow | 22-09-1546 | | Component of the speaker PCB assembly. Soldered to the "R-SP". |
| 17 | Brown | 22-09-1546 | | Component of the speaker PCB assembly. Soldered to the "R-SND". |
| 18 | Orange | 22-09-1546 | | Component of the speaker PCB assembly. Soldered to the "L-SP". |
| 19 | Blue | 22-09-1546 | | Component of the speaker PCB assembly. Soldered to the "L-SND". |
| 20 | Black | 22-09-1575 | | Component of the PCB on the LCD assembly. Solder to the "FM-I SGND". |