





Cat. No. 48-22-8520 shown

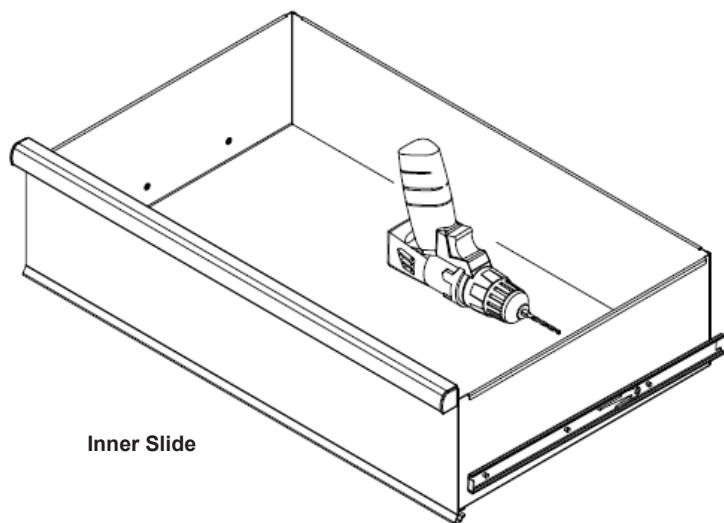


Inner Slide

To remove drawer slide, remove rivets (15) from the inner slide (13) and outer slide (14) by 5/32" drill bit.

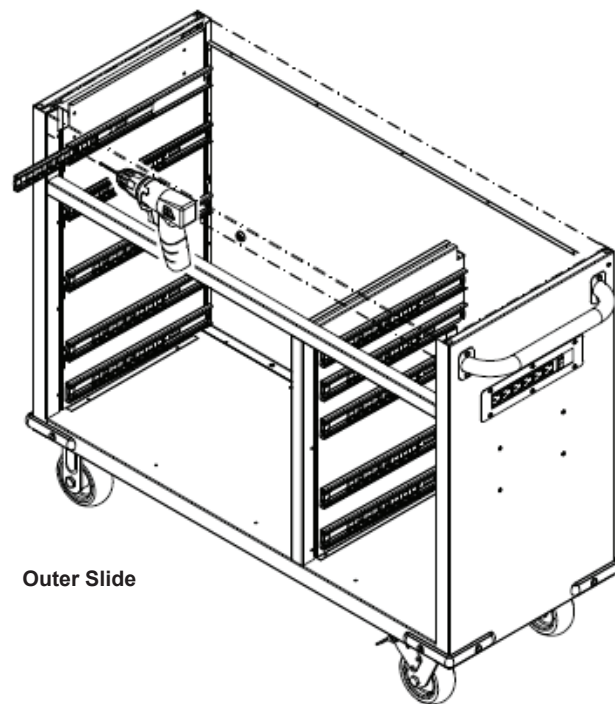


Outer Slide

To install drawer slide, place inner slide (13) into position and insert rivets (15) by using a rivet gun. Repeat steps for outer slide (14).

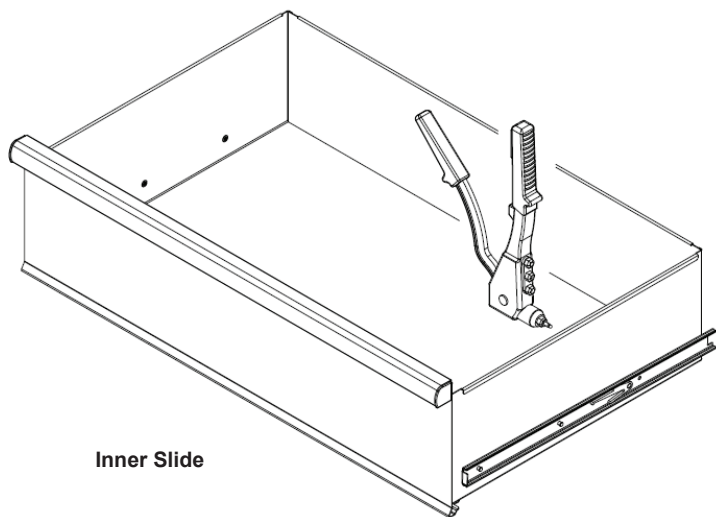

Inner Slide

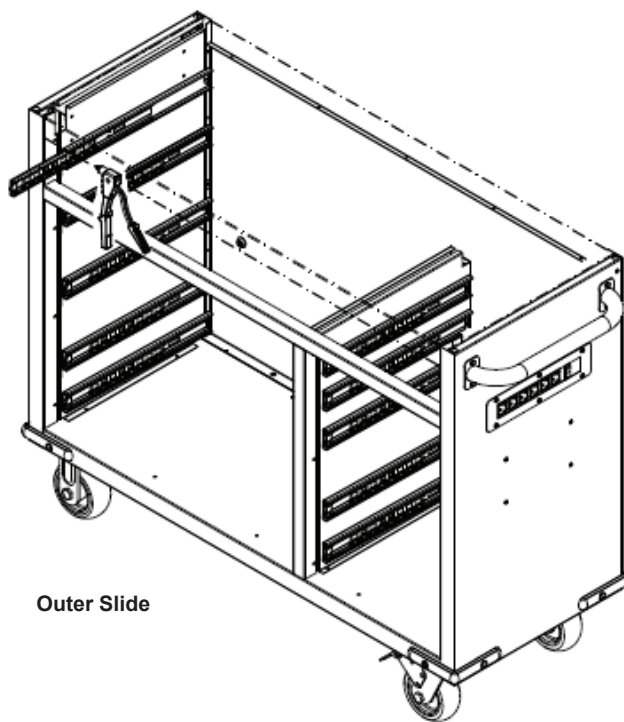

Outer Slide