



SERVICE PARTS LIST

BULLETIN NO.
55-24-5200

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
5/8" (16mm) SDS Rotary Hammer			Sept. 2013
CATALOG NO.	5263-59	STARTING SERIAL NO.	D90A
		WIRING INSTRUCTION SEE PAGE 4	

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	05-73-0010	Screw	(1)
2	22-64-5261	Cord Set	(1)
3	-----	Service Nameplate	(1)
4	14-38-0010	Handle Housing Assembly	(1)
4a	-----	Right Handle Housing Halve	(1)
4b	-----	Left Handle Housing Halve	(1)
5	18-34-5263	Service Field	(1)
6	16-34-5263	Service Armature	(1)
7	-----	Fan	(1)
8	-----	Ball Bearing	(1)
9	-----	External Snap Ring	(1)


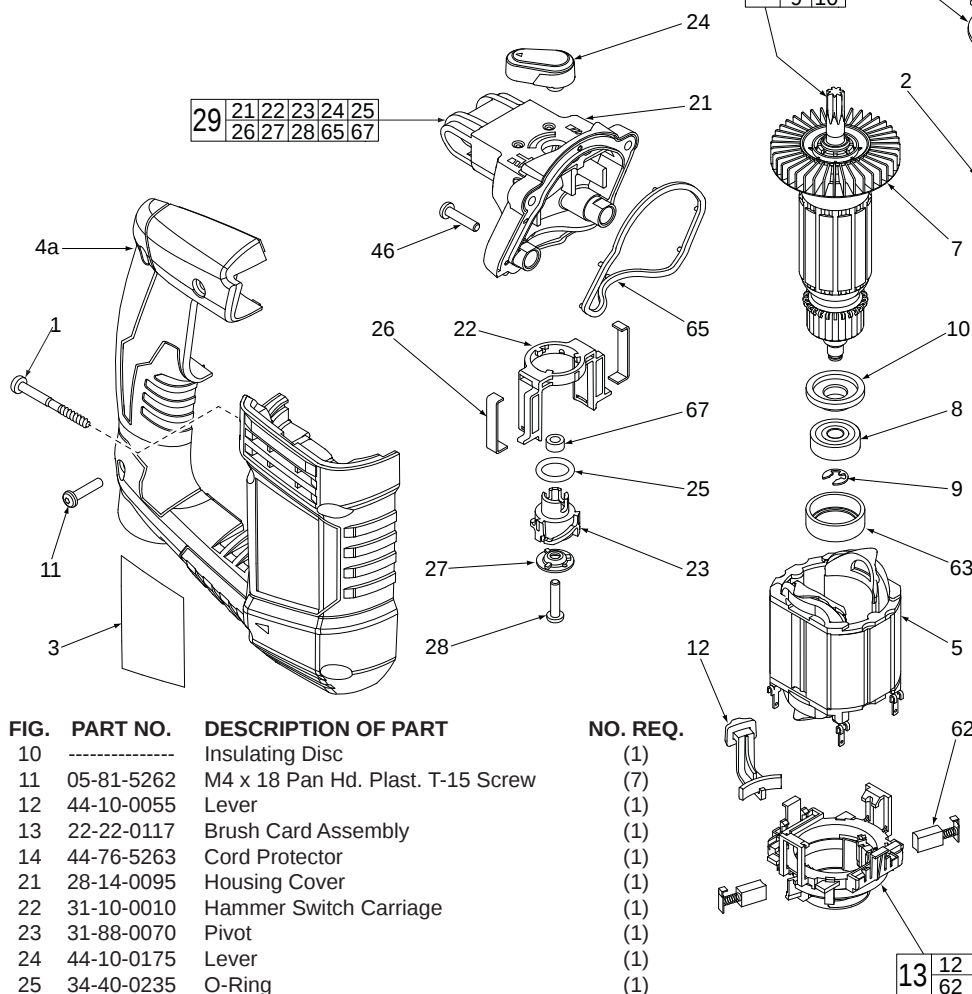


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
10	-----	Insulating Disc	(1)
11	05-81-5262	M4 x 18 Pan Hd. Plast. T-15 Screw	(7)
12	44-10-0055	Lever	(1)
13	22-22-0117	Brush Card Assembly	(1)
14	44-76-5263	Cord Protector	(1)
21	28-14-0095	Housing Cover	(1)
22	31-10-0010	Hammer Switch Carriage	(1)
23	31-88-0070	Pivot	(1)
24	44-10-0175	Lever	(1)
25	34-40-0235	O-Ring	(1)
26	44-86-0025	Fastening Bow	(2)
27	31-88-0080	Disc	(1)
28	05-81-0210	M4 x 18 Pan Hd. Plast. T-15 Screw	(1)
29	31-40-0125	Housing Cover Assembly	(1)
46	05-74-0105	Screw	(4)
58	23-66-5261	Switch Assembly	(1)
60	42-55-0235	Carrying Case	(1)
62	22-22-5369	Carbon Brush (Set of 2)	(1)
63	45-22-0540	Bearing Cup	(1)
65	43-44-0035	Gasket	(1)
67	43-84-0010	Felt	(1)
69	45-30-0045	Rubber Slug	(2)
87	43-84-5200	Housing Insert	(2)
	23-94-0330	Leadwire Assembly (See wiring on page 4)	(1)
	23-94-0335	Leadwire Assembly (See wiring on page 4)	(1)

● = Component of the
14-46-0087 5263-59
Service Maintenance Kit

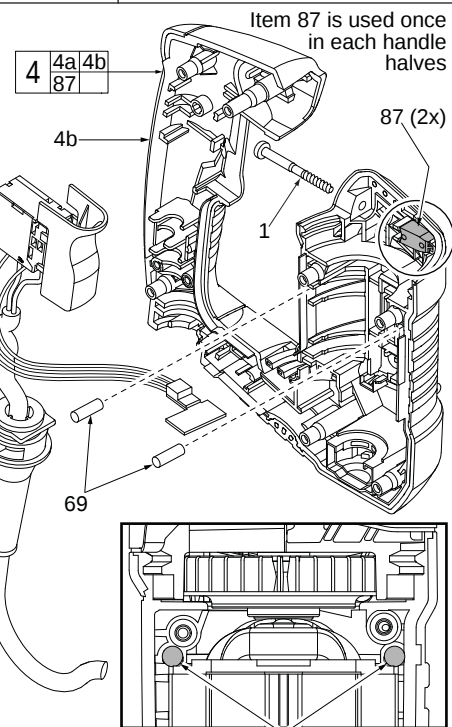

Install / place rubber slugs (69)
into position shown once field has
been placed in housing halve.

● 14-46-0087 SERVICE MAINTENANCE KIT			
FIG.	PART NO.	DESCRIPTION	QTY.
62	22-22-5369	Carbon Brush Set	(1)
63	45-22-0540	Bearing Cup	(1)
65	43-44-0035	Gasket	(1)
67	43-84-0010	Felt	(1)
69	45-30-0045	Rubber Slug	(2)
64	42-52-5262	Dust Cap	(1)
66	44-90-0375	External Snap Ring	(1)
68	44-90-0085	Protection Washer	(1)
70	34-40-0285	O-Ring	(1)
71	44-90-0185	Retaining Ring	(1)
72	44-90-0195	Retaining Ring	(1)
73	44-90-0205	Protection Washer	(3)
74	34-40-1510	O-Ring	(1)
75	34-40-0305	O-Ring	(1)
76	42-76-0095	Thrust Collar	(2)
77	45-88-0985	Backing Flange	(1)
78	45-88-1060	Spacer	(1)
79	45-88-1115	Stop Washer	(1)
80	45-88-1145	Bearing Washer	(1)
81	45-88-1155	Disc Washer	(1)
82	42-36-0175	Backing Flange	(1)
83	05-74-0480	M5 x 25 Screw	(2)
84	34-40-0320	Seal Ring	(1)
85	34-40-0325	O-Ring	(1)
	49-08-5350	P' Grease (100g tube)	(1)
	49-08-5345	Q2' Grease (45g tube)	(1)

MILWAUKEE ELECTRIC TOOL CORPORATION
13135 W. Lisbon Road, Brookfield, WI 53005

Drwg. 4


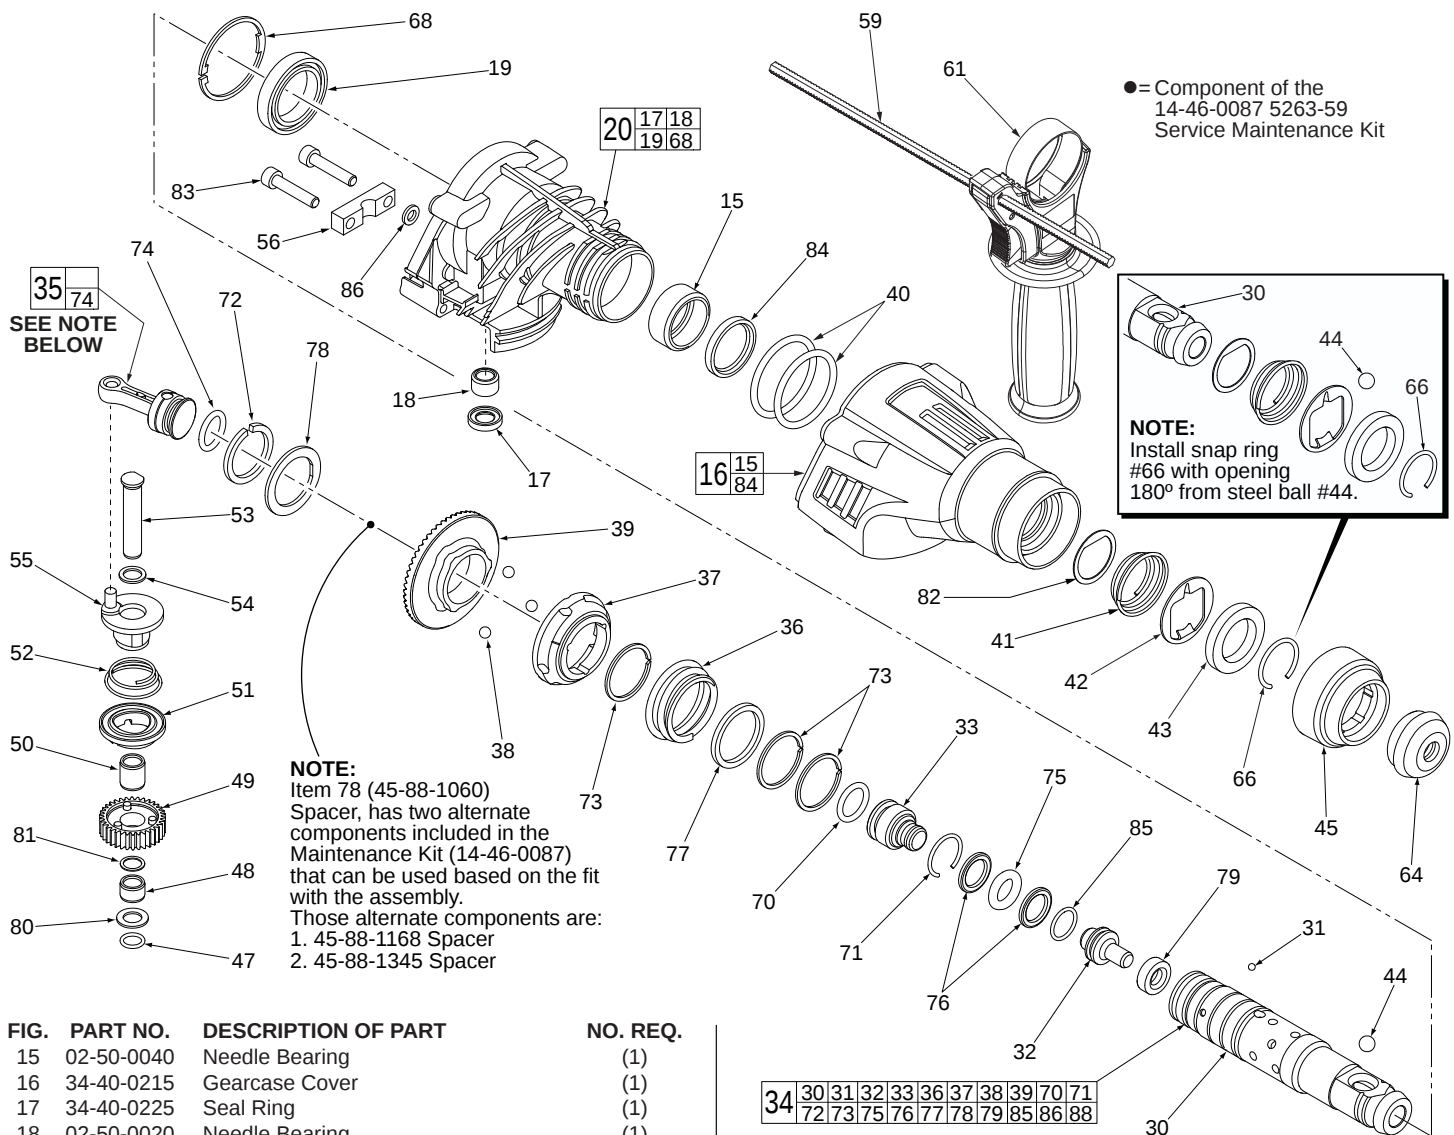



FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
70	34-40-0285	● O-Ring	(1)
71	44-90-0185	● Retaining Ring	(1)
72	44-90-0195	● Retaining Ring	(1)
73	44-90-0205	● Retaining Ring	(3)
74	34-40-1510	● O-Ring	(1)
75	34-40-0305	● O-Ring	(1)
76	42-76-0095	● Thrust Collar	(2)
77	45-88-0985	● Flange Washer	(1)
78	45-88-1060	● Spacer	(1)
79	45-88-1115	● Stop Washer	(1)
80	45-88-1145	● Bearing Washer	(1)
81	45-88-1155	● Disc Washer	(1)
82	42-36-0175	● Backing Flange	(1)
83	05-74-0480	● M5 x 25 Screw	(2)
84	34-40-0320	● Seal Ring	(1)
85	34-40-0325	● O-Ring	(1)
86	45-88-0975	Washer	(1)
	14-46-0087	Maintenance Kit	(1)


NOTE: The original design of the Piston Assembly (35) utilized a connecting rod made of nylon. The connecting rod is now made of aluminum and is a direct replacement.

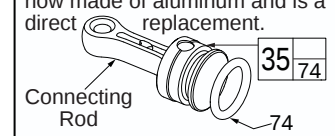

LUBRICATION NOTES: Type 'Q2' Grease
No. 49-08-5345, 1.5 oz. / 45g tube

Type 'P' Grease
No. 49-08-5350, 3.5 oz. / 100g tube

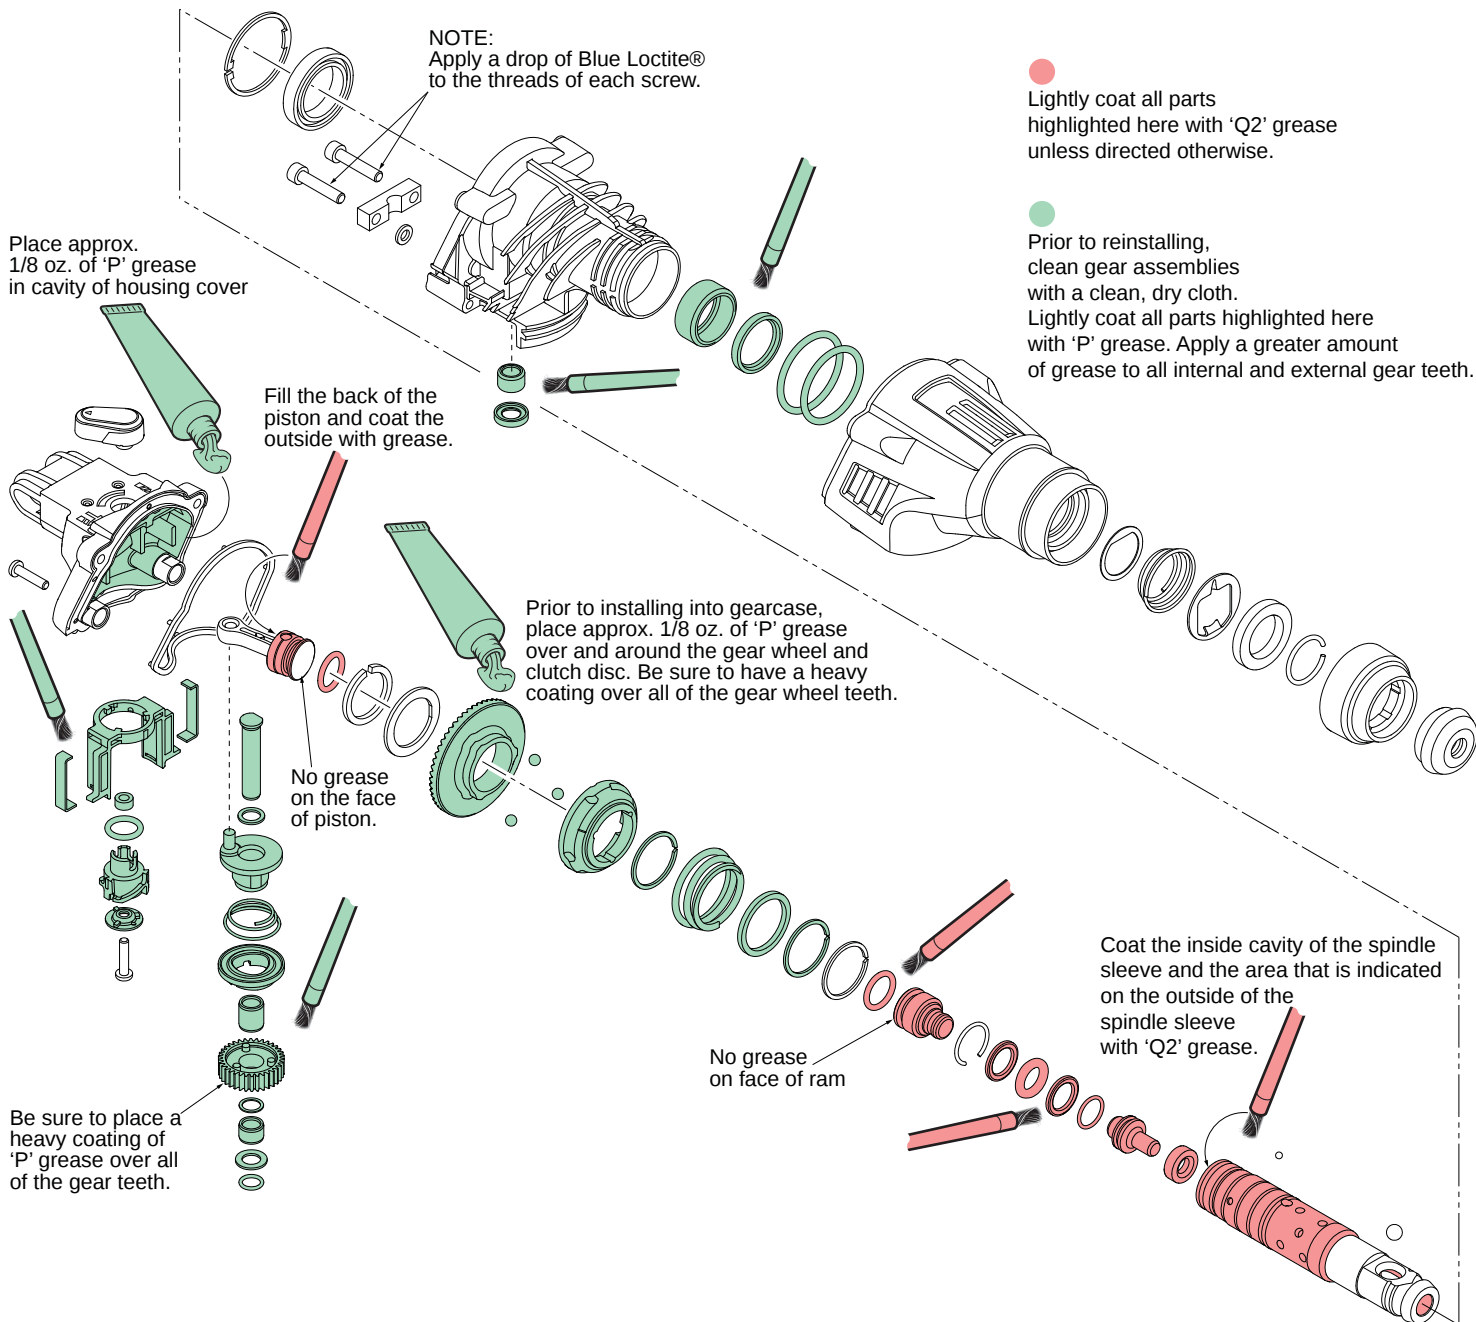

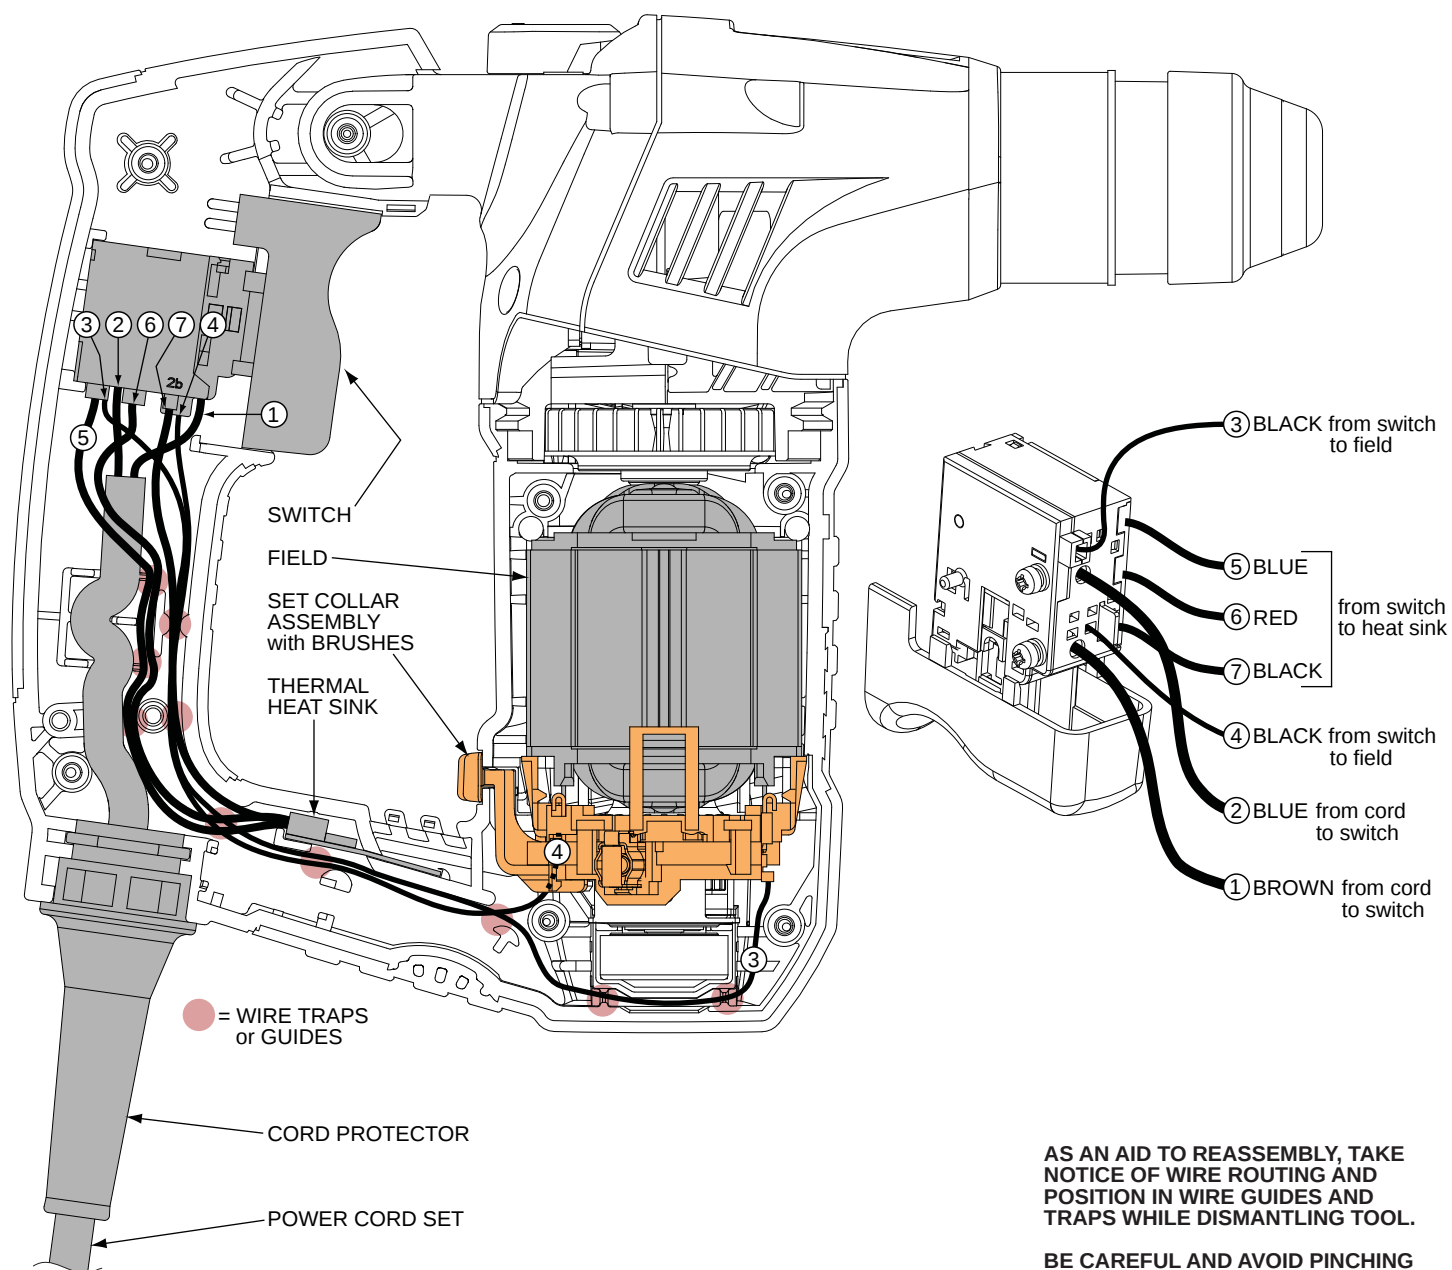

AS AN AID TO REASSEMBLY, TAKE NOTICE OF WIRE ROUTING AND POSITION IN WIRE GUIDES AND TRAPS WHILE DISMANTLING TOOL.

BE CAREFUL AND AVOID PINCHING WIRES BETWEEN HANDLE HALVES WHEN ASSEMBLING.

WIRING SPECIFICATIONS

Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation
1	Brown	22-64-5261	-----	Component of cord set. Connect to switch as shown.
2	Blue	22-64-5261	-----	Component of cord set. Connect to switch as shown.
3	Black	23-94-0335	-----	Leadwire assembly. Connect to switch and front right position of the field as shown.
4	Black	23-94-0330	-----	Leadwire assembly. Connect to switch and rear left position of the field as shown.
5	Blue	23-66-5261	-----	Component of the switch assembly. Wired between the switch and the thermal heat sink.
6	Red	23-66-5261	-----	Component of the switch assembly. Wired between the switch and the thermal heat sink.
7	Black	23-66-5261	-----	Component of the switch assembly. Wired between the switch and the thermal heat sink.