
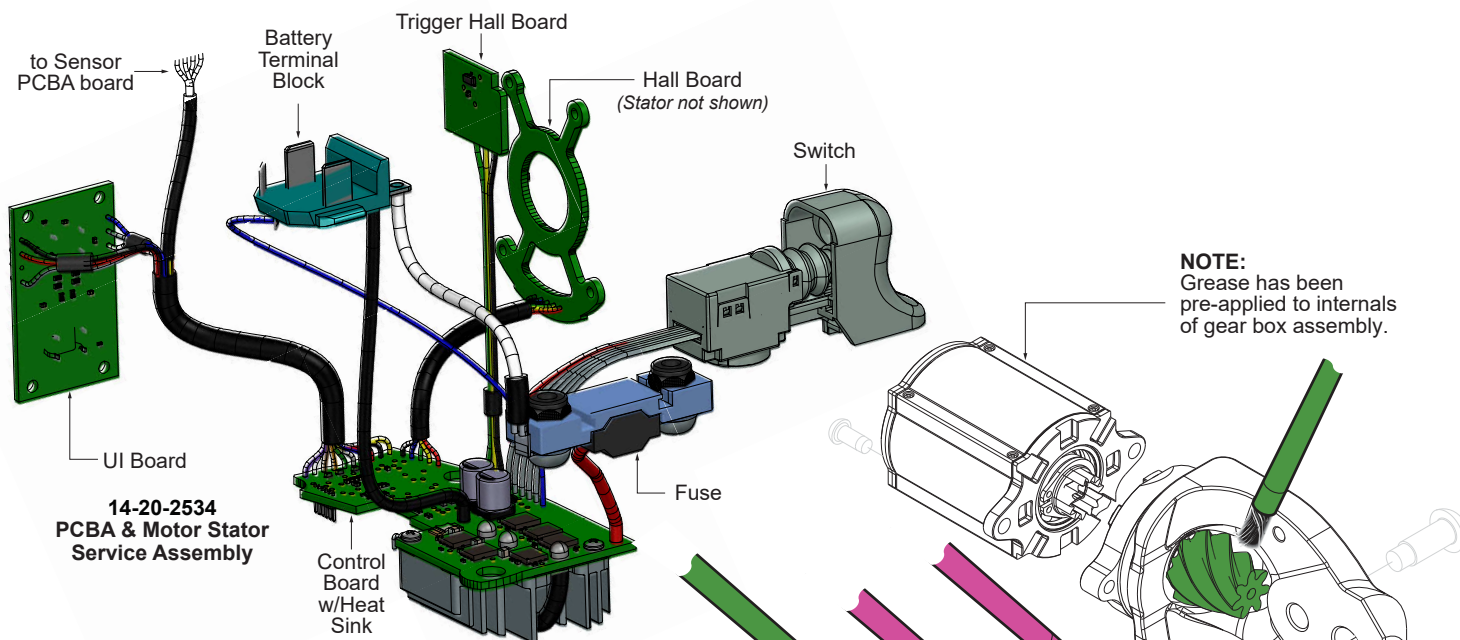


SERVICE WIRING DIAGRAM

- As an aid to reassembly, take notice of wire routing and position in wire guides and traps while dismantling tool.
- Avoid pinched wires, be sure that all wires and sleeves are pressed completely down in wire guides and traps.
- Be sure that all components of the electronics kit are seated firmly and squarely in the housing recesses.
- Prior to installing the housing cover onto the housing support, be sure that there are no interferences.

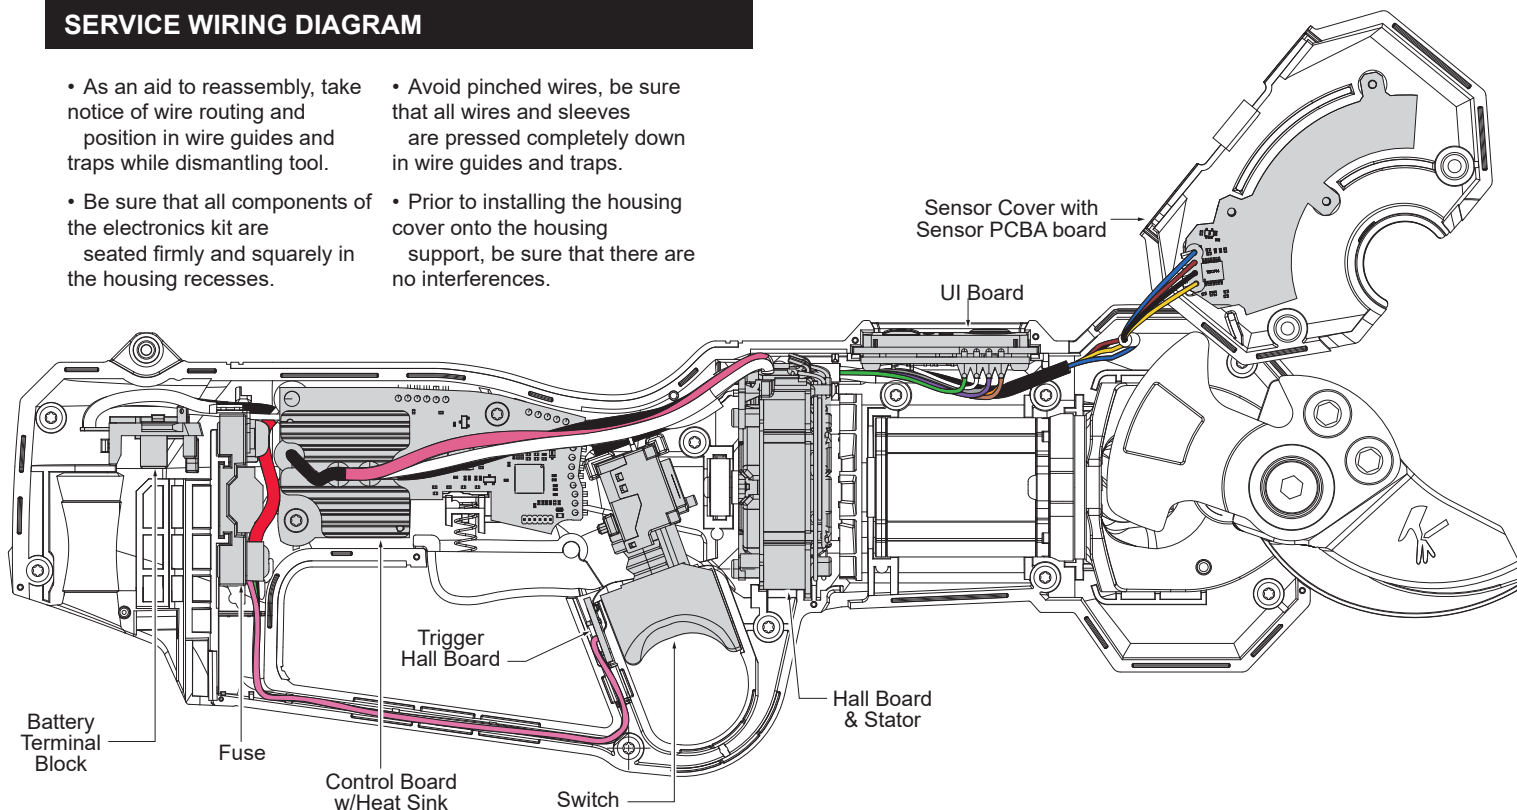

LUBRICATION INSTRUCTIONS

- 1 lb. Type "J" Grease, No. 49-08-4220
- Renolin DO 22 HV Oil, No. 49-32-2534

NOTE:

Regarding parts to receive oil:
Place one to two drops of the recommended oil (or the equivalent) to the parts shown after assembly. Make sure no oil is on the fastener threads or mating threads.

NOTE:

Regarding parts to be lubricated:
Apply a light coating of grease to all highlighted parts shown prior to installation. Reference the key above for grease types.

NOTE:

Add oil between support/cutting blades #7g & #7h, locking cap #7b, washer #7e and bevel gear #7f after assembly. Make sure no oil is on the fastener threads or mating threads.