DATE: January 2005

TO: AUTHORIZED portable electric tool SERVICE STATIONS


factory SERVICE / SALES SUPPORT BRANCH

SALES COMPANIES


TOOL(S) \ PRODUCT(S) AFFECTED: 6180-20 14" Premium (Abrasive) Cut-Off Machine

6190-20 14" Dry Cut-Off Machine

SUBJECT: 42-96-0020 Rubber (Bearing) Cup Installation

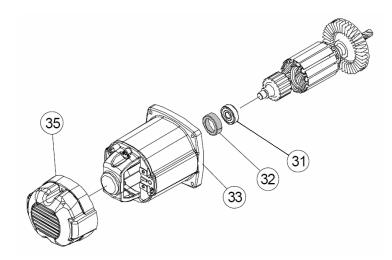

- Install 42-96-0020 Rubber Cup [fig. 32] into Motor Housing [fig. 33] before assembling motor housing / field coil / fan (baffle) guide onto armature and gear housing of the cut-off machine.
- Check to insure rear armature ball bearing is properly seated into 42-96-0020 Rubber Cup. Rubber Cup. 42-96-0020 <u>must extend beyond race of ball bearing and motor housing bearing bore</u> *see illustration*. An incorrect installation of Rubber Cup will allow it to easily work its way out of the motor housing bore.

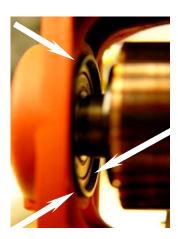

This bulletin is for informational purposes. PLEASE NOTE ON SERVICE PARTS LIST: 54-40-0900, 54-40-0925