## **SERVICE PARTS LIST**



SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS M18™ FUEL™ 1/2" Square Impact Wrench (Baseline)

2755B-20

STARTING **G79A** SERIAL

REVISED BULLETIN DATE Feb. 2020

> WIRING INSTRUCTION SEE PAGE 2

**EXAMPLE:** 

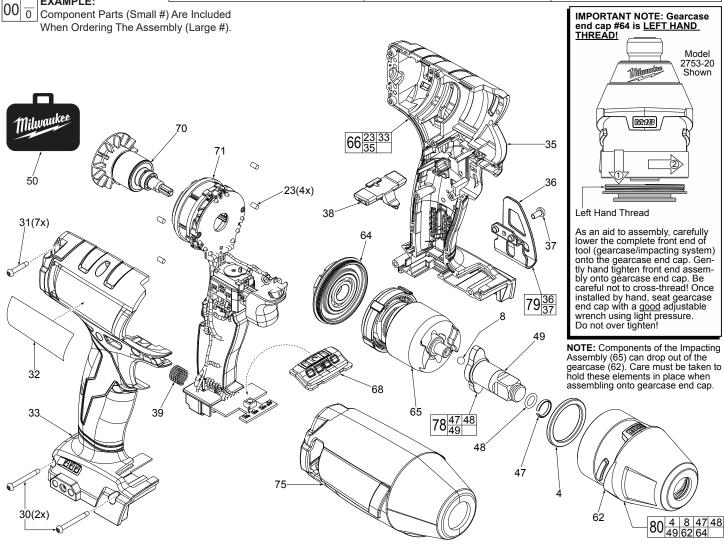


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
4	45-88-2653	Plastic Washer	(1)
8	02-02-1300	5.0mm Steel Ball	(1)
23	45-30-2653	Rubber Slug	(4)
30	06-82-0013	M3 x 38mm Pan Hd. ST TP T-10 Sc	rew (2)
31	06-82-6350	M3 x 16mm Pan Hd. ST T-10 Screw	
32	12-20-0046	Service Nameplate	(1)
33		Housing Halve - Right	(1)
35		Housing Halve - Left	(1)
36		Belt Clip	(1)
37	06-82-0130	6-32 x 5/16" Pan Hd. T-15 Screw	(1)
38	45-24-0013	Forward / Reverse Shuttle	(1)
39	40-50-1090	Spring	(1)
47	44-90-4530	Friction Ring	(1)
48	34-40-0900	O-Ring	(1)
49		1/2" Square Anvil	(1)
50	42-55-2754	Blow Molded Carrying Case	(1)
62	28-50-0012	Gearcase with Bushing	(1)
64	44-66-0028	Gearcase End Cap with Ball Bearing	g (1)
65	14-46-0016	Impacting Assembly	(1)
66	31-44-0033	Housing Assembly	(1)
68	45-24-0044	Speed Selector Assembly	(1)
70	16-07-2754	Rotor Assembly	(1)
71	14-20-0018	Electronics Assembly	(1)
75	49-12-0012	Rubber Boot (Optional, Accessory)	(1)
78	42-06-0024	1/2" Square Anvil Assembly	(1)
79	42-70-0059	Belt Clip Assembly	(1)
80	14-30-0016	Gearcase / Anvil Assembly	(1)

## FIG. **LUBRICATION** (Type 'J' Grease, No. 49-08-4220):

- Coat inside of bushing inside front gearcase (62) with grease. 62
- Lightly coat the I.D. of the ring gear and the center of the planet gears of impacting assembly (65) with grease. 65
- Coat pinion of rotor assembly (70) with grease. 70

