



SERVICE PARTS LIST

BULLETIN NO.
PN0005062

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS

M18 FUEL™ NEXUS™ Dual Battery Wet/Dry Vacuum Motor Head w/ VACLINK™ (36V)

CATALOG NO. 0926-20

SERIAL NO. R12A



REVISED BULLETIN

DATE
Aug. 2025


WIRING INSTRUCTION
See Page 2

EXAMPLE:
Component Parts (Small #)
Are Included When Ordering
The Assembly (Large #).

PACKOUT™ Compatibility

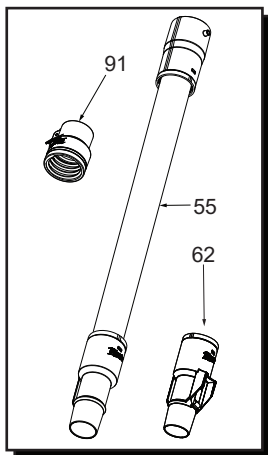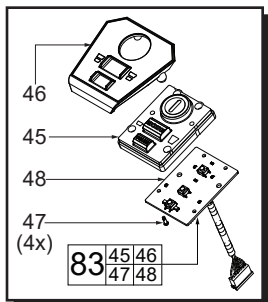

#55: You must order
the VacLink nozzle (62)
when replacing the
hose assembly (55).

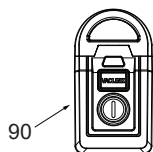

#90: For VACLINK™
Wireless Remote
service parts, refer to
the 0952-20 SPL.


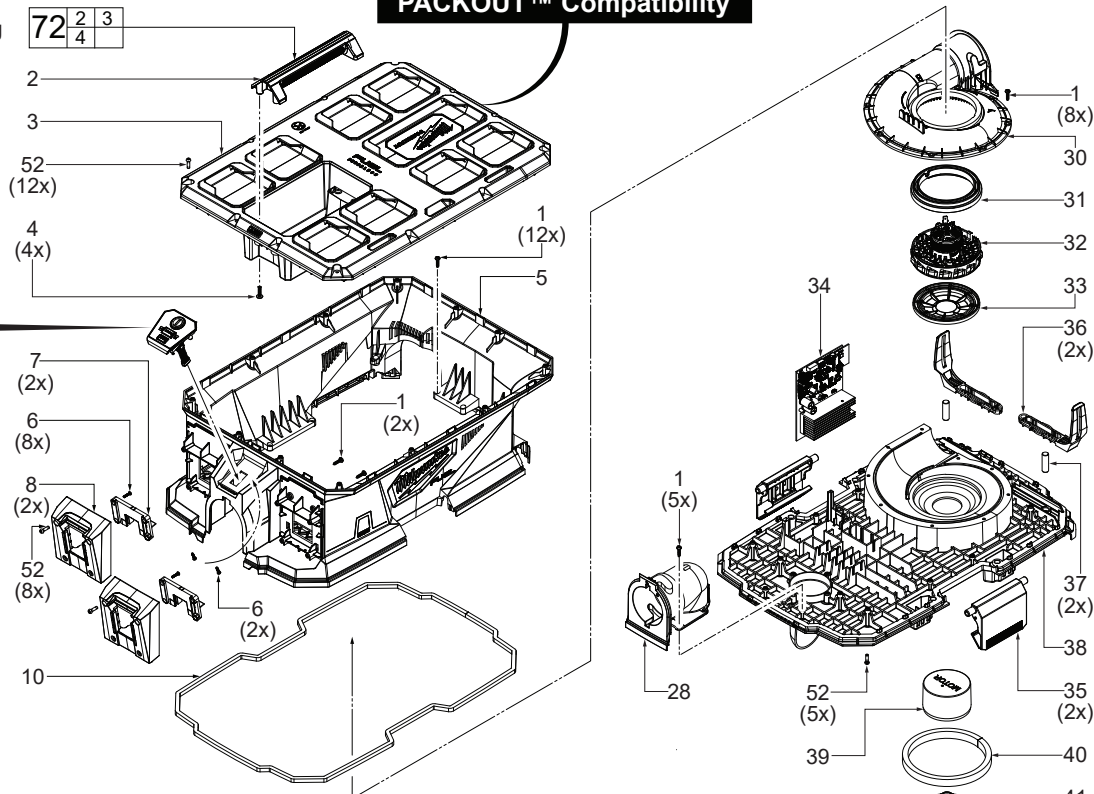


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	06-82-9220	M4 x 16mm Pan Hd. PT T-20 Screw	(27)
2	-----	Top Handle	(1)
3	-----	Packout Top	(1)
4	05-78-0003	M5 x 17mm Pan Hd. Tapt. T-25 Screw	(4)
5	-----	Head Shell	(1)
6	05-78-0044	M3 x 12mm Pan Hd. Tapt. T-10 Screw	(10)
7	22-56-0002	Terminal Block Cover	(2)
8	31-01-0118	Battery Rail	(2)
10	45-06-0002	Rubber Tank Gasket	(1)
28	43-33-0001	Inlet Elbow	(1)
30	31-01-0121	CD Volute Top	(1)
31	31-50-0109	Upper Motor Isolator	(1)
32	31-50-9005	Motor	(1)
33	31-50-0116	Lower Motor Isolator	(1)
34	14-20-1106	Main PCBA	(1)
35	31-01-0122	Tank Buckle	(2)
36	31-01-0123	Hose Reset	(2)
37	31-01-0109	Pin	(2)
38	31-01-0126	Mid Frame	(1)
39	42-46-0001	Ball Float	(1)
40	45-06-0004	Filter Seal	(1)
41	42-46-0002	Float Ball Cage	(1)
42	49-90-1978	Filter Assembly (Available in Stores)	(1)
44	23-94-0104	Wire Assembly (Not Shown)	(1)
45	-----	Rubber Button Pad	(1)
46	-----	UI Cover	(1)
47	05-78-0004	M2 x 7mm Pan Hd. ST Phillips Screw	(4)
48	-----	UI PCBA	(1)
52	05-78-0005	M4 x 14mm Pan Hd. ST T-20 Screw	(28)
55	49-90-1996	9' Hose	(1)
62	14-37-0001	Nozzle	(1)
72	14-46-1108	Packout Top Service Kit	(1)
83	14-46-1107	UI Service Assembly	(1)
	12-20-1104	Service Nameplate (Not Shown)	(1)
90	0952-20	VACLINK™ Wireless Remote	(1)
91	31-01-0127	Dust Extraction Tool	(1)

Refer to the next page for:
The corresponding Parts
List, Torque Specifications
Chart, and Wire Routing.

SCREW TORQUE SPECIFICATIONS

FIG.	PART NO.	DESCRIPTION OF FASTENER	WHERE USED	SEAT TORQUE	
				(lb-in)	(kgf-cm)
1	06-82-9220	M4 x 16mm Pan Hd. PT T-20 Screw	Volute, Elbow, Battery Cover, Head Shell	5.2-6.9	6-8
1	06-82-9220	M4 x 16mm Pan Hd. PT T-20 Screw	Feet	4.7-5.6	5.5-6.5
4	05-78-0003	M5 x 17mm Pan Hd. Tapt. T-25 Screw	Top Handle, Packout Top	9.5-11.2	11-13
6	05-78-0044	M3 x 12mm Pan Hd. Tapt. T-10 Screw	Terminal Block Cover, Battery Cover	4.7-5.6	5.5-6.5
16	05-81-0013	M4 x 10mm Pan Hd. ST Phillips Screw	Tank Handles	4.7-5.6	5.5-6.5
47	05-78-0004	M2 x 7mm Pan Hd. ST Phillips Screw	UI PCBA	1.3-2.1	1.5-2.5
52	05-78-0005	M4 x 14mm Pan Hd. ST T-20 Screw	Packout Top, Batt. Rail, Bag Holder, Cage	5.2-6.9	6-8

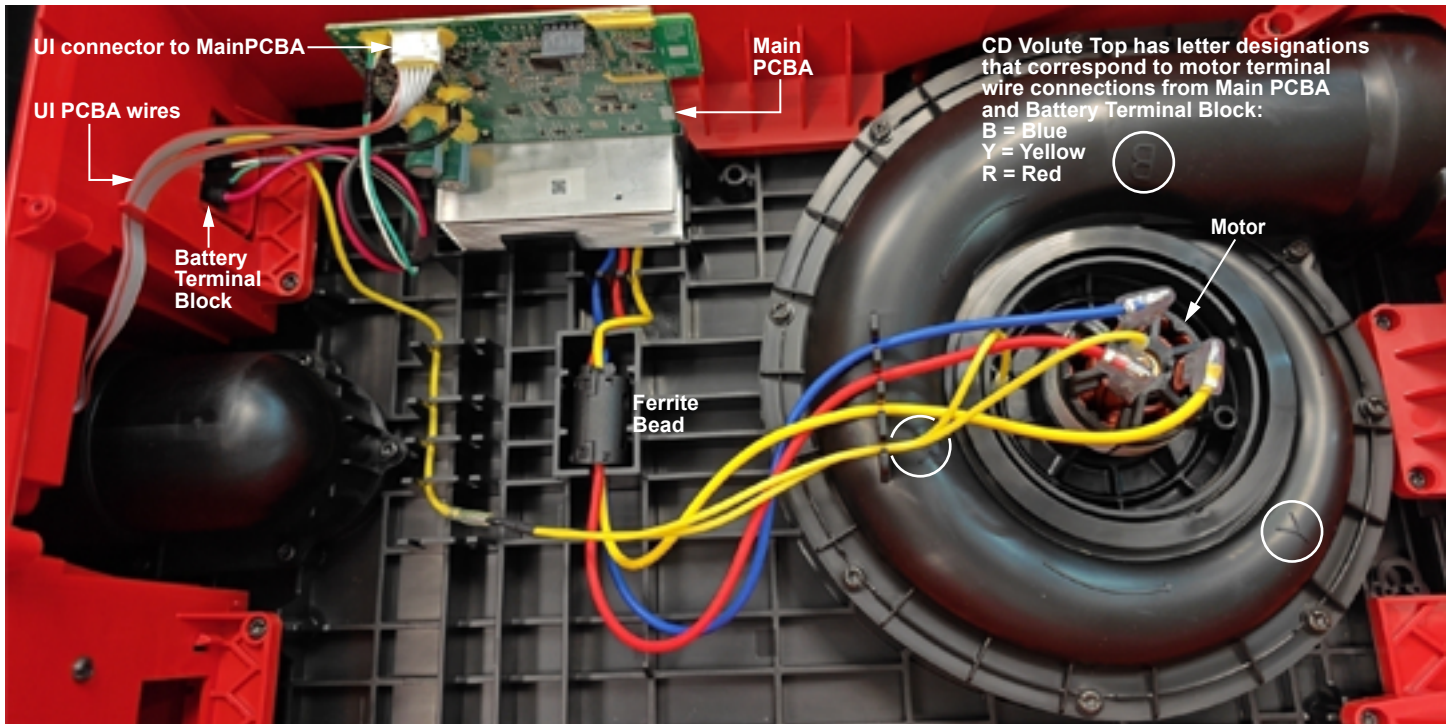

Before you disassemble the tool, record the wire routings and their positions in the wire guides and traps.

Make sure that all components of the electronics kit are aligned and installed correctly in the housing recesses.

Do not strain or stretch wires. Make sure that all wires and sleeves are pushed fully down into wire guides and traps.

Before you install the mid-frame onto the head, make sure they align correctly with no interferences.

Before you install the battery, check that the switch operates correctly.

After you install the battery, make sure the switch triggers move freely and function correctly before you operate the tool.