## WIRING INSTRUCTIONS


TITLE

## WORM DRIVE SAW

MILWAUKEE ELECTRIC TOOL CORP

13135 WEST LISBON RD. BROOKFIELD, WIS

DATE Jan. '76 **58-01-0341** 

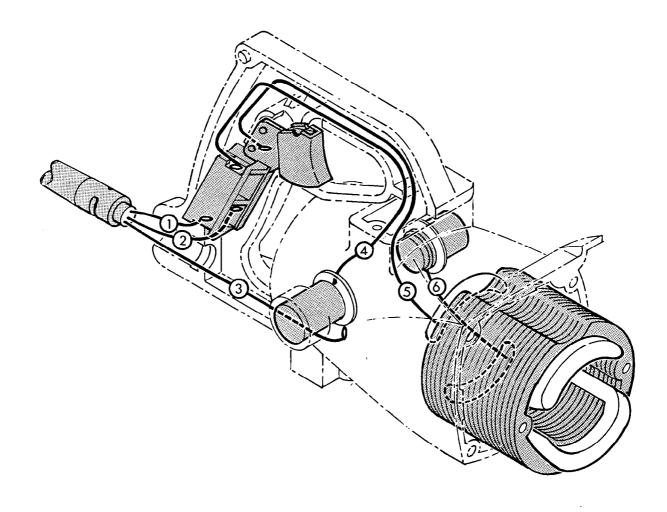

WIRING SPECIFICATIONS							
Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation.			
1	White	Cord	2-3/4"	Strip 3/16" for T1			
2	Black	Cord	2-3/4"	Strip 3/16" for T1			
3	Green	Cord	4-1/4"	Strip 3/16" for T1			
4	Yellow	16	9-1/4"	Strip 3/16" for T1 / Strip 3/8" & solder			
5	Black	Field	8''	Strip 3/16" for T1			
6	Yellow	Field	2-1/2"	Strip 3/8" & solder			
		<u> </u>					
		1					

## NOTE:

All leads must be held to ± 1/8".
All field leads to be measured from and perpendicular to laminations.
All lead lengths are before stripping.

TERMINAL DESCRIPTION							
Code	Part No.	Qnty.					
T1	23-74-0390	5					
CONNECTOR DESCRIPTION							
Code	Part No.	Qnty:					