



TO INFORM YOU

PRODUCT
SUPPORT
BULLETIN #

141

TO: Authorized Service Stations
Branch Office/Service Centers
Branch/Service Center Managers
Regional Managers
District Sales Managers

DATE March 1986

FROM: Corbert A. Garb - National Service Manager

TOOL(S)/PRODUCT(S) AFFECTED: 8975 Heat Gun


SUBJECT: Testing Procedures

TROUBLE SHOOTING CHART...

Symptom	Possible Cause(s)	TEST	Corrective Action
No Output (DEAD)	1. Open Cord Set 2. Faulty Switch 3. Loose/Broken Wire 4. Open Fuse F1	A B C D	Replace Replace Repair Replace Heating Element Assembly
High Heat ONLY No Air Flow	1. Motor 2. Printed Circuit Board (PCB) 3. Faulty R1/R2 Low Heat Element 4. Faulty Switch - Position II 5. Loose/Broken Wire	E F G B C	Replace Replace Replace Heating Element Assembly Replace Repair
Low Heat ONLY w/Air Flow	1. Faulty R3 High Heat Element 2. Faulty Switch - Position II 3. Loose/Broken Wire	G B C	Replace Heating Element Assembly Replace Repair

This bulletin is for informational purposes; please note on Service Parts List 54-05-0640

MILWAUKEE ELECTRIC TOOL CORPORATION
13135 W. LISBON RD., BROOKFIELD, WIS. 5300
(414) 781-3600

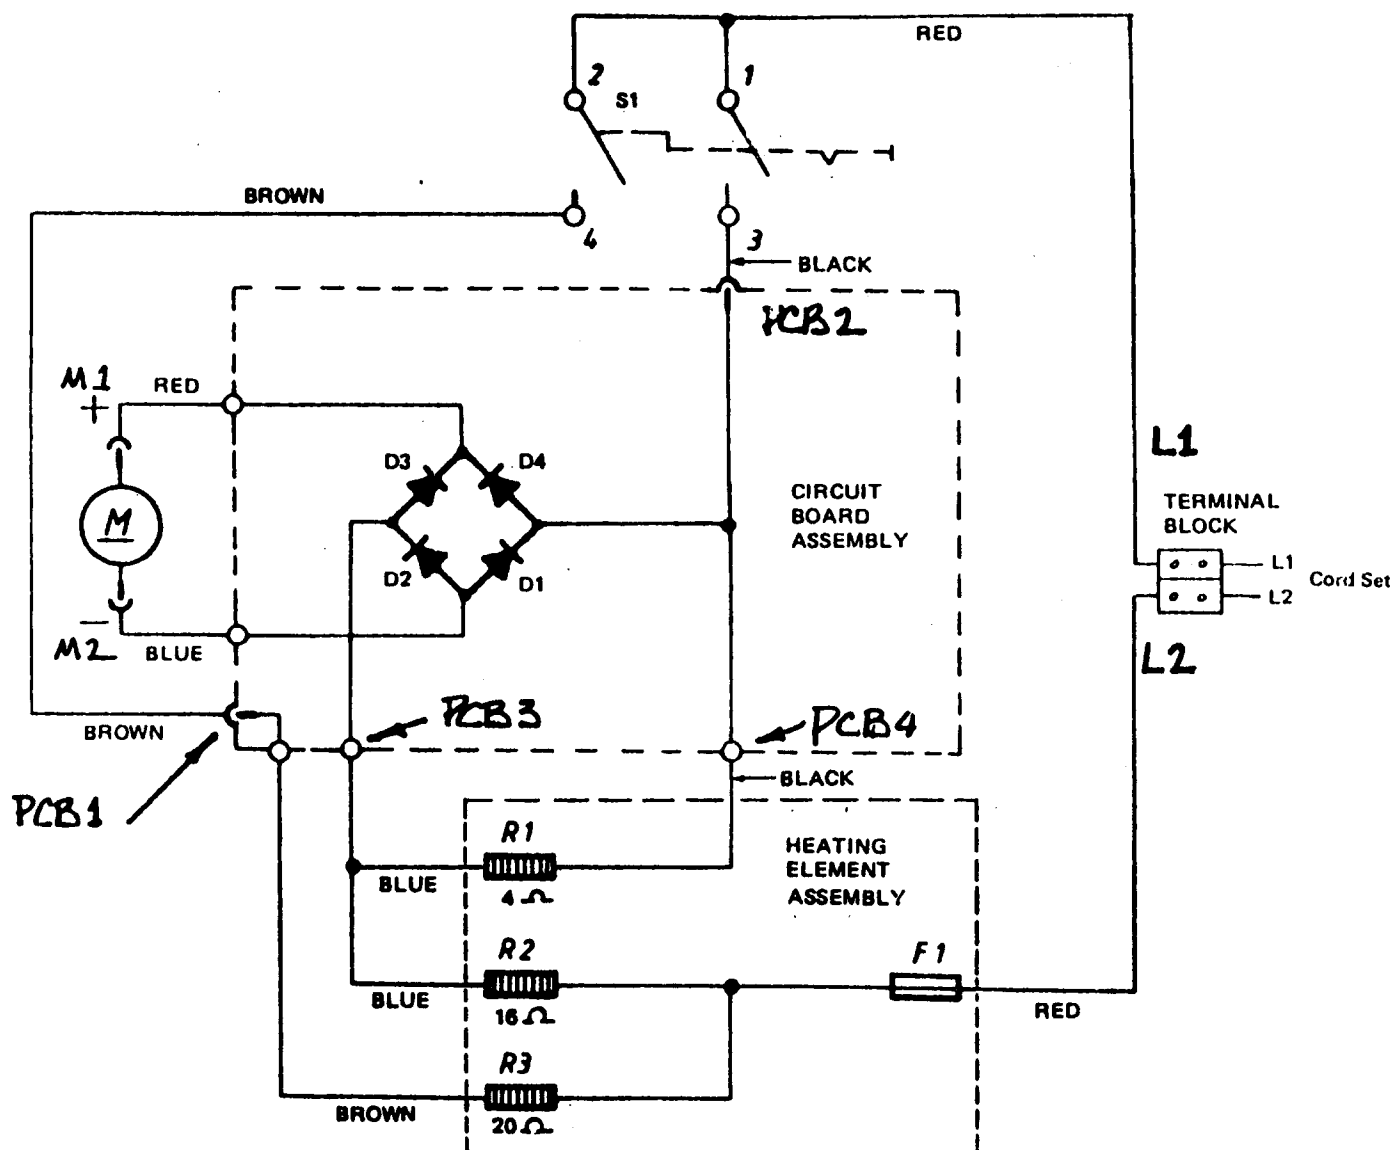

Switch - S1
 Position "O" - Off
 Position "I" - Low Heat
 Terminals 1 & 3 Of Switch
 Are Connected Only
 Position "II" - High Heat.
 Terminals 1 & 3 Are
 Connected and Term.
 2 & 4 Are Connected.

