



SERVICE PARTS LIST

BULLETIN NO.
54-49-0280

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS			REVISED BULLETIN	DATE
52" MOBILE WORK STATION				July 2017
CATALOG NO.	48-22-8552	SERIAL NUMBER	H85A	
			WIRING INSTRUCTION	


00 0

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

●14-46-1644

Hardware Kit

4	-----	Screw M4 x 10L	(4)
7	-----	Bolt M6 x 15L	(4)
11	-----	Bolt M6 x 15L	(2)
18	-----	Bolt M6 x 15L	(8)
22	-----	Bolt M8 x 15L	(16)
23	-----	Washer M8	(16)
29	-----	Bolt M6 x 15L	(2)
--	-----	Charger Mounting Screw M4 x 10L	(4)

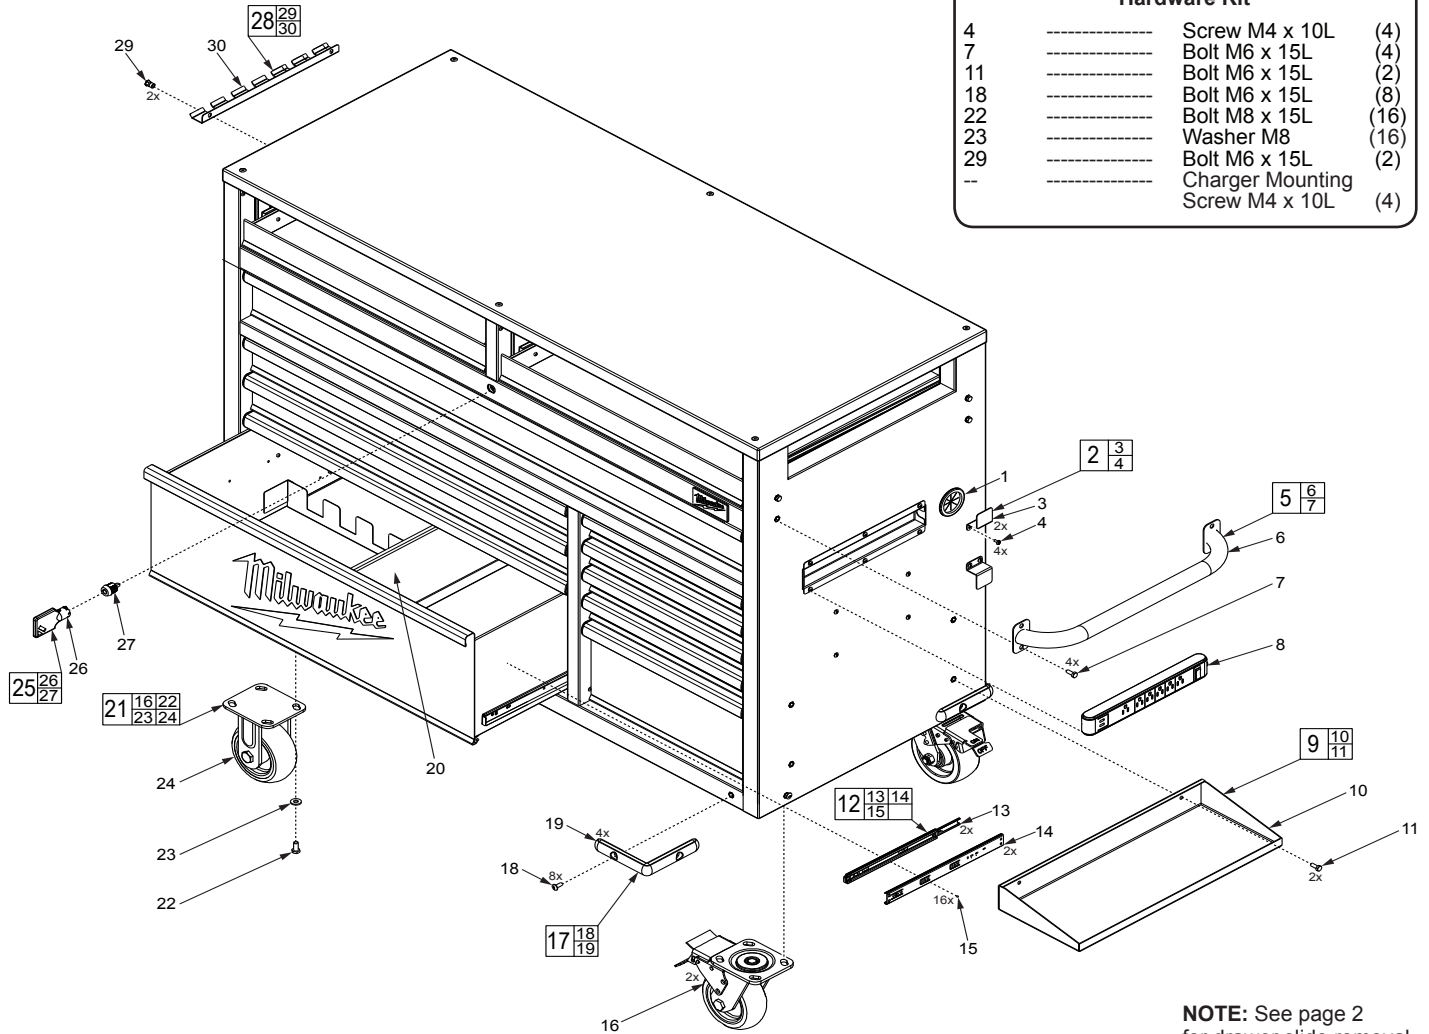

NOTE: See page 2
for drawer slide removal
and installation.

FIG.	PART NO.	DESCRIPTION OF PART
1	22-90-0105	Cord Grommet
2	14-46-1645	Cord Storage Bracket Kit
3	-----	Cord Storage Bracket
4	-----	Screw M4 x 10L
5	14-46-1615	Side Handle Kit
6	-----	Side Handle
7	-----	Bolt M6 x 15L
8	14-46-1641	Power Strip
9	14-46-1620	Side Shelf Kit
10	-----	Side Shelf
11	-----	Bolt M6 x 15L
12	14-46-1642	Drawer Slide Kit (Set of 2)
13	-----	Inner Drawer Slide
14	-----	Outer Drawer Slide
15	-----	5/32" Pop Rivet
16	-----	Swivel Caster w/ Brake
17	42-38-0265	Corner Bumper Kit (Set of 4)
18	-----	Bolt M6 x 15L
19	-----	Corner Bumper
20	31-21-0110	Center Divider


NO. REQ.
(1)
(1)
(2)
(4)
(1)
(1)
(4)
(1)
(1)
(1)
(2)
(2)
(16)
(2)
(1)
(8)
(4)
(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
21	14-46-1245	Caster Kit (Set of 4)	(1)
22	-----	Bolt M8 x 15L	(16)
23	-----	Washer M8	(16)
24	-----	Rigid Caster	(2)
25	14-46-1643	Key/Lock Kit	(1)
26	-----	Key	(1)
27	-----	Lock	(1)
28	14-46-1625	Tool Storage Hanger Kit	(1)
29	-----	Bolt M6 x 15L	(2)
30	-----	Tool Storage Hanger	(1)
31	58-95-0180	Drawer Liner Kit (Set of 11) (Not Shown)	(1)
32	12-20-0109	Service Nameplate (Not Shown)	(1)

FIG. NOTES


32
A clean, dry surface is essential for proper performance for any adhesive system. The area intended for application of any adhesive label or nameplate must be prepared by cleaning with isopropyl alcohol. The solvent is to be applied with a clean, lint free applicator and the surface allowed to dry before applying the label or nameplate.

Cat. No. 48-22-8520 shown

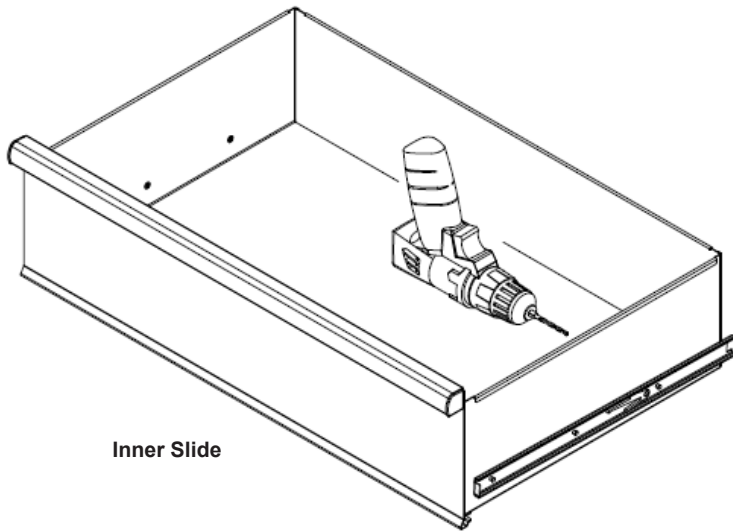


Inner Slide

To remove drawer slide, remove rivets (15) from the inner slide (13) and outer slide (14) by 5/32" drill bit.

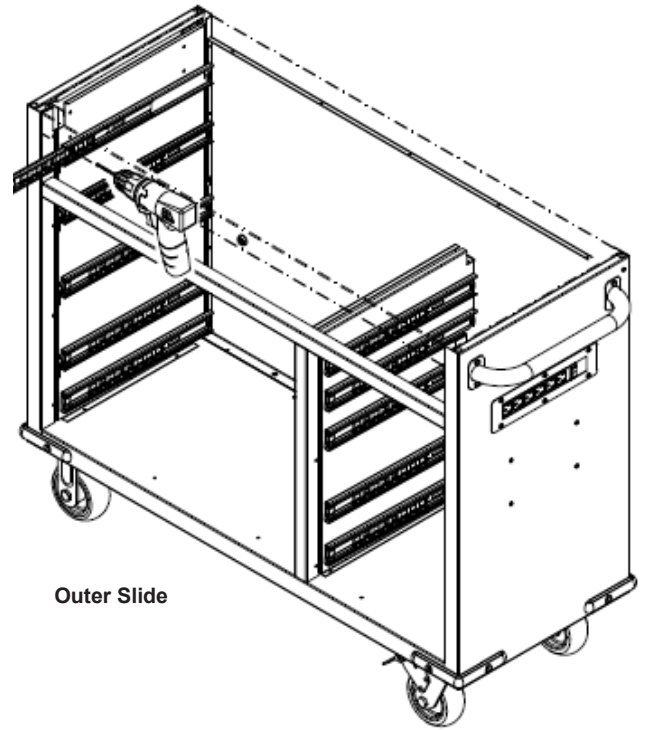


Outer Slide

To install drawer slide, place inner slide (13) into position and insert rivets (15) by using a rivet gun. Repeat steps for outer slide (14).

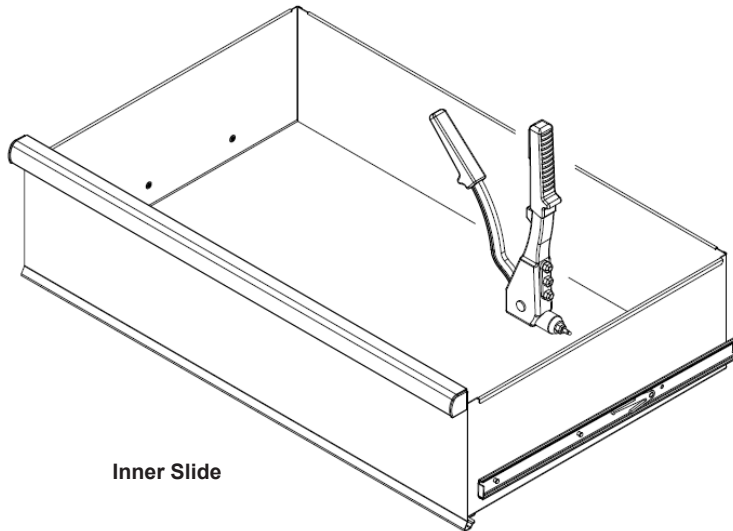

Inner Slide

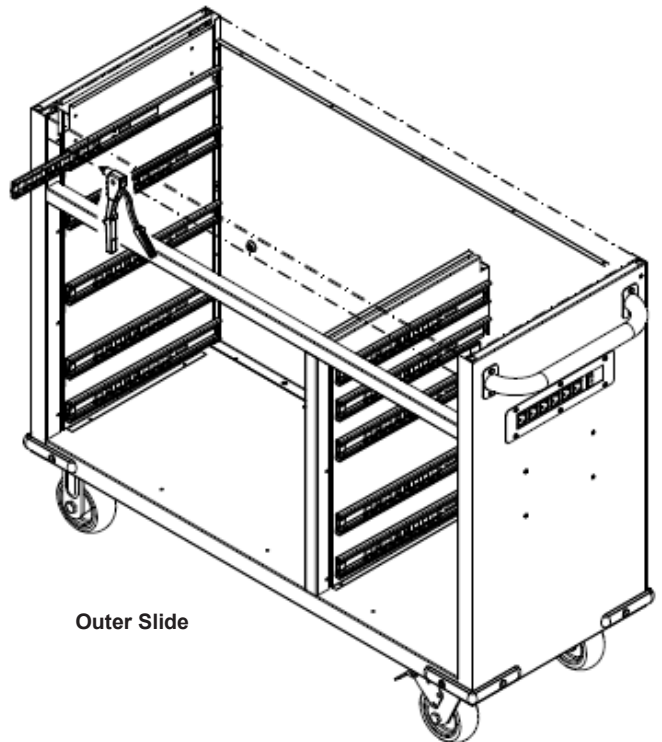

Outer Slide