




SERVICE PARTS LIST

BULLETIN NO.
54-49-0295

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
41" HIGH CAPACITY STEEL STORAGE CHEST & CABINET COMBO			Aug. 2024
CHEST CATALOG NO.	48-22-8547	STARTING SERIAL NO.	M12A
CABINET CATALOG NO.	48-22-8548	STARTING SERIAL NO.	M13A

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

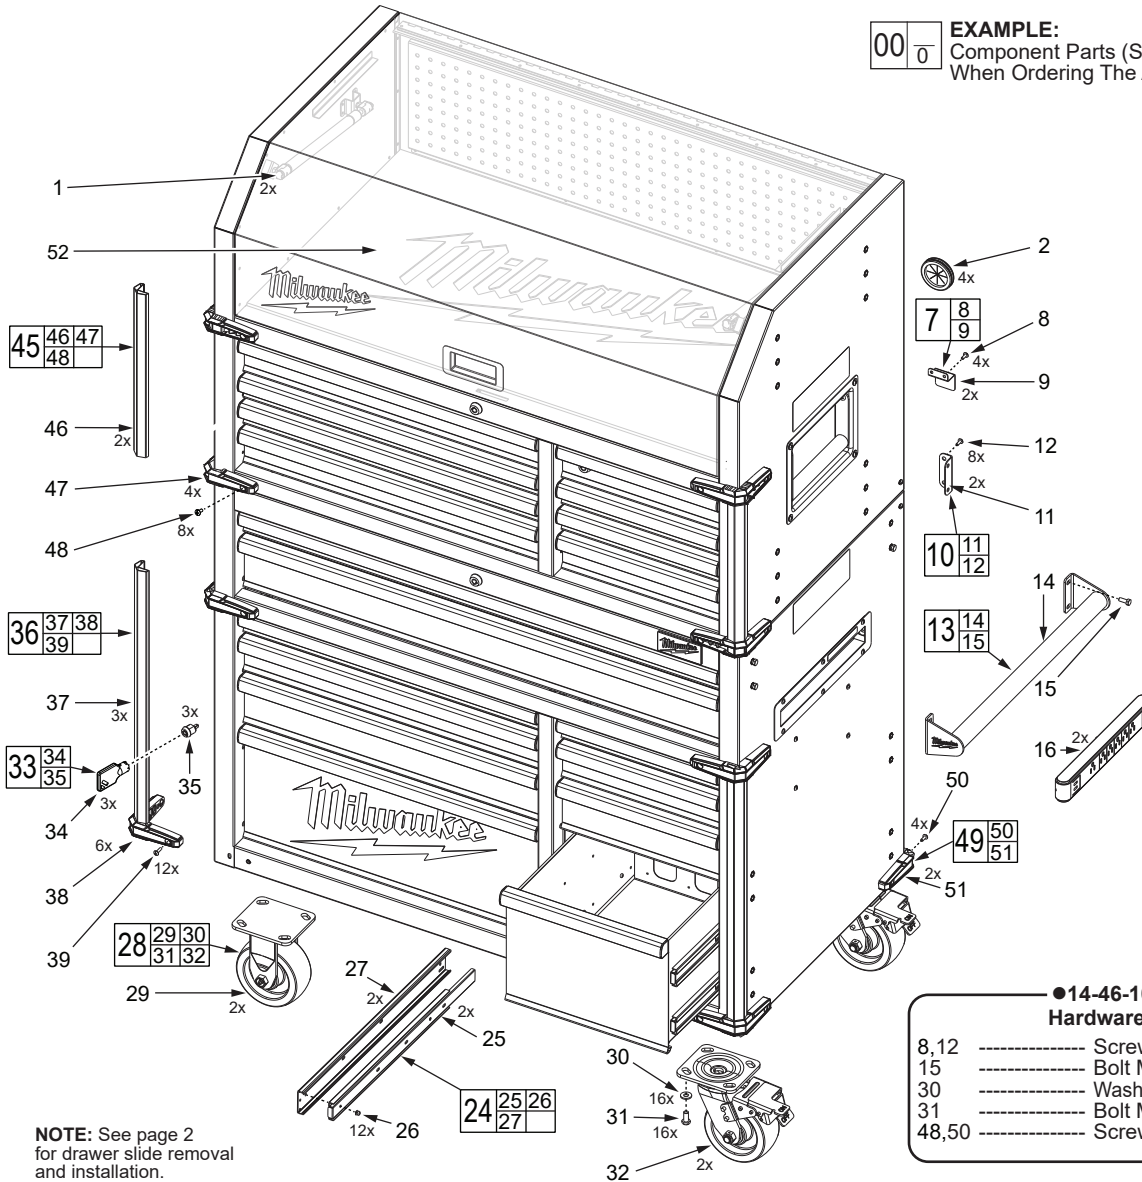

NOTE: See page 2
for drawer slide removal
and installation.


●14-46-1675 Hardware Kit		
8,12	Screw M4 x 12L	(20)
15	Bolt M6 x 16L	(4)
30	Washer 19 x 8.5 x 2	(16)
31	Bolt M8 x 18L	(16)
48,50	Screw M4 x 16L	(20)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	14-46-8447	Chest Lid Gas Lift (Set of 2)	(1)
2	22-90-0105	Cord Grommet (Set of 1)	(1)
7	14-46-1645	Cord Storage Bracket Kit	(2)
8		Screw M4 x 12L	(4)
9		Cord Storage Bracket	(4)
10	14-46-1305	Bracket Kit (Set of 2)	(1)
11		Bracket	(1)
12		Screw M4 x 12L	(8)
13	14-46-1648	Side Handle Kit	(1)
14		Side Handle	(1)
15		Bolt M6 x 16L	(4)
16	14-46-1342	Power Strip w/USB	(2)
24	14-46-1642	Drawer Slide Kit (Set of 2)	(1)
25		Outer Drawer Slide	(2)
26		5/32" Pop Rivet	(12)
27		Inner Drawer Slide	(2)
28	14-46-1245	Caster Kit (Set of 4)	(1)
29		Rigid Caster	(2)
30		Washer M8	(16)
31		Bolt M8 x 18L	(16)
32		Swivel Caster with Brake	(2)
33	14-46-1255	Key/Lock Kit (Set of 3)	(1)
34		Key	(3)
35		Lock	(3)
36	42-38-0271	Corner Bumper/Extrusion Kit	(1)
37		Corner Guard	(2)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
38		Corner Bumper	(6)
39		Screw M4 x 16L	(12)
45	42-38-0266	Corner Bumper/Extrusion Kit	(1)
46		Corner Guard	(2)
47		Corner Bumper	(4)
48		Screw M4 x 16L	(8)
49	42-38-0269	Rear Bumper Kit	(1)
50		Screw M4 x 16L	(4)
51		Rear Bumper	(2)
52	42-38-8547	Chest Mat	(1)
53	12-20-0108	Chest Service Nameplate (Not Shown)	(1)
	12-20-0109	Cabinet Service Nameplate (Not Shown)	(1)
	12-25-1814	Electrical Label (Not Shown)	(2)
	58-95-8547	Chest Drawer Liner Kit (Set of 8) (Not Shown)	(1)
	58-95-8548	Cabinet Drawer Liner Kit (Set of 10) (Not Shown)	(1)


FIG. NOTES
7 A second Cord Storage Bracket is located on the lower cabinet.
16 A second Power Strip is located on the inside of the top chest.

Cat. No. 48-22-8520 shown

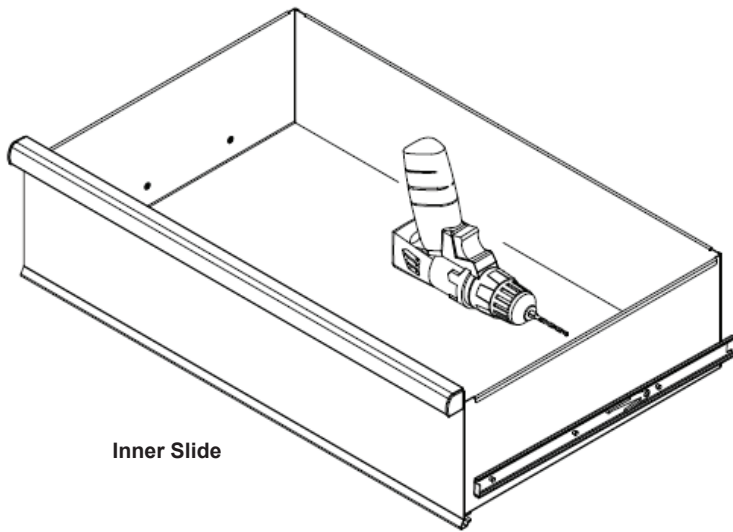


Inner Slide

To remove drawer slide, remove rivets (26) from the inner slide (27) and outer slide (25) by 5/32" drill bit.

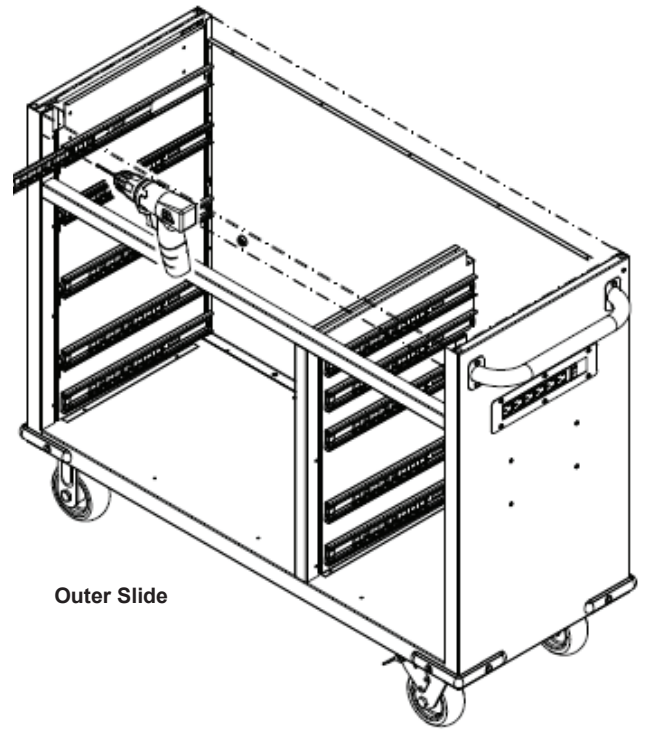


Outer Slide

To install drawer slide, place inner slide (27) into position and insert rivets (26) by using a rivet gun. Repeat steps for outer slide (25).

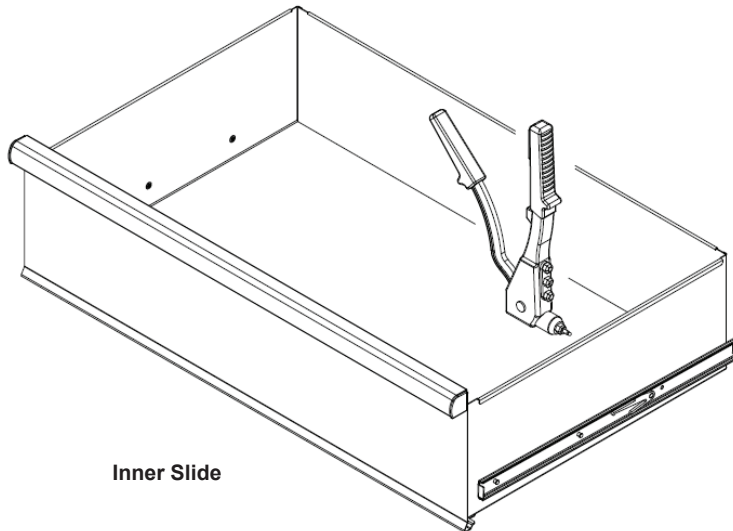

Inner Slide

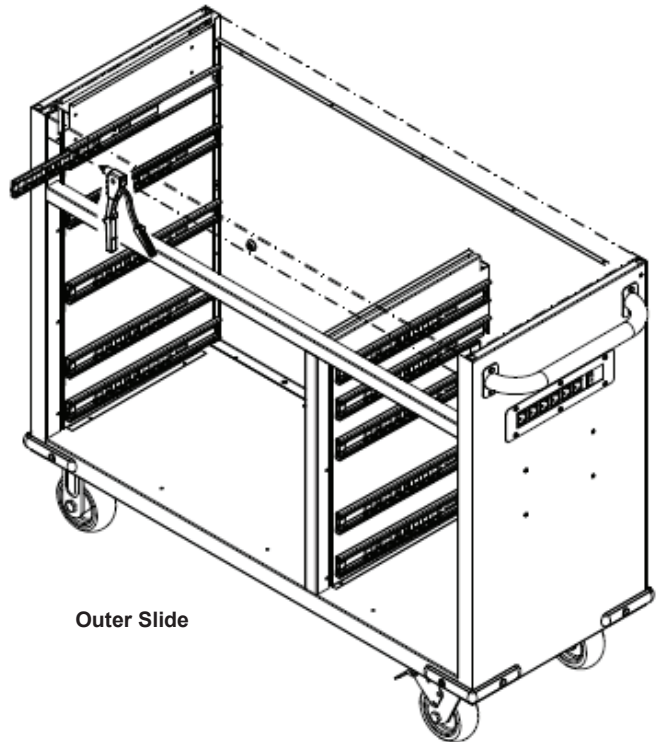

Outer Slide