


IMPORTANT:

Rounded side of Washers (14) must be placed facing the inside surface of Piston (13) as shown.

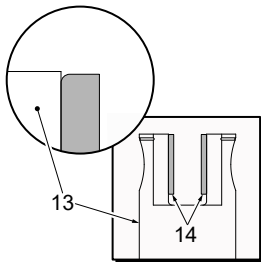



●14-46-5265

Rotary Hammer Service Kit

2	42-52-5262	Dust Cap	(1)
3	31-58-0037	Chuck Sleeve	(1)
4	44-90-0014	C-Ring	(2)
10c	34-40-1425	O-Ring	(1)
10e	34-40-0018	O-Ring	(1)
10f	34-40-1410	O-Ring	(1)
10h	34-40-1440	O-Ring	(1)
10k	44-90-1026	Snap Ring	(1)
10s	44-90-0216	C-Ring (Thicker)	(1)
10t	44-90-0215	C-Ring (Thinner)	(1)
12a	34-40-1511	O-Ring	(1)
14	45-88-5200	Washer	(2)
17a	43-44-1375	Gasket	(1)
26	22-18-0032	Carbon Brush	(2)
29a	44-90-1180	C-Ring	(1)
29m	06-82-0017	M4.0 x 0.7 Screw	(1)
36	05-74-1030	Taptite Screw	(2)
	49-08-5355	'Q2' Grease 2.8 oz. tube	(1)
	49-08-5262	'S2' Grease 1.4 oz. tube	(2)

SERVICE NOTE: When installing components of the Rotary Hammer Service Kit (●14-46-5265), please note design differences to the 5262-21. Spindle (10a) and Clutch Plate (10q) will be either a 3 ball or 6 ball design (10r). Illustrations in this service parts list reflect the original 3 ball design.

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	14-34-5262	Auxiliary Side Handle Assembly	(1)
1a	44-94-5381	Depth Gage Rod	(1)
2	42-52-5262	● Rubber Cap	(1)
3	31-58-0037	● Chuck Sleeve	(1)
4	44-90-0014	● C-Ring	(2)
5	02-02-0275	Steel Ball	(2)
6	42-36-0191	Ball Plate	(1)
7	40-50-5262	Conical Spring	(1)
8a	28-14-0013	Gearcase w/ Bushing, Bearings, Seal & Screw	(1)
8d	44-90-1011	Lock Plate	(1)
8e	40-50-0870	Lock Plate Spring	(1)
9	44-10-5264	Shift Knob Assembly	(1)
10	32-75-0021	SDS Spindle and Gear Assembly	(1)
10a	-----	SDS Spindle	(1)
10b	43-06-0040	Brake Ring	(1)
10c	34-40-1425	● O-Ring	(1)
10d	45-22-0870	Anvil Sleeve	(1)
10e	34-40-0018	● O-Ring	(1)
10f	34-40-1410	● O-Ring	(1)
10g	45-08-0650	Anvil	(1)
10h	34-40-1440	● O-Ring	(1)
10j	42-76-1001	Washer	(1)
10k	44-90-1026	● Snap Ring	(1)

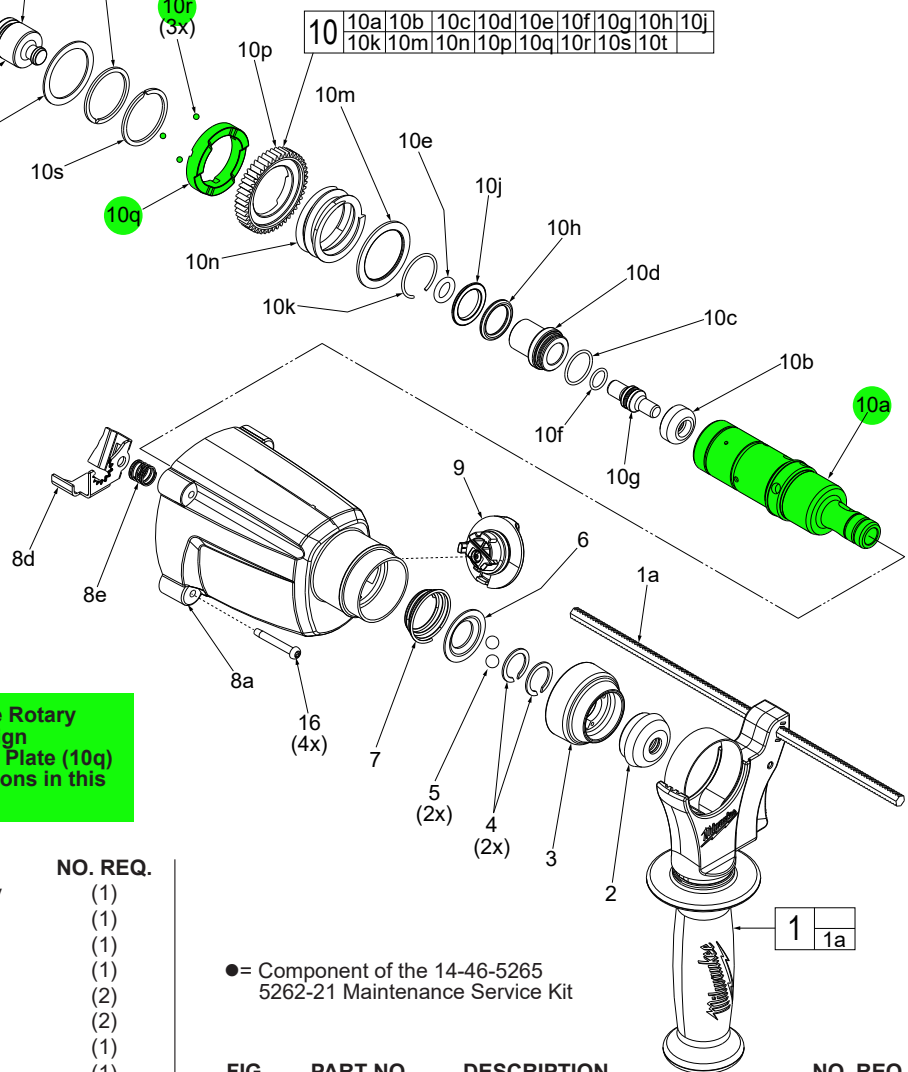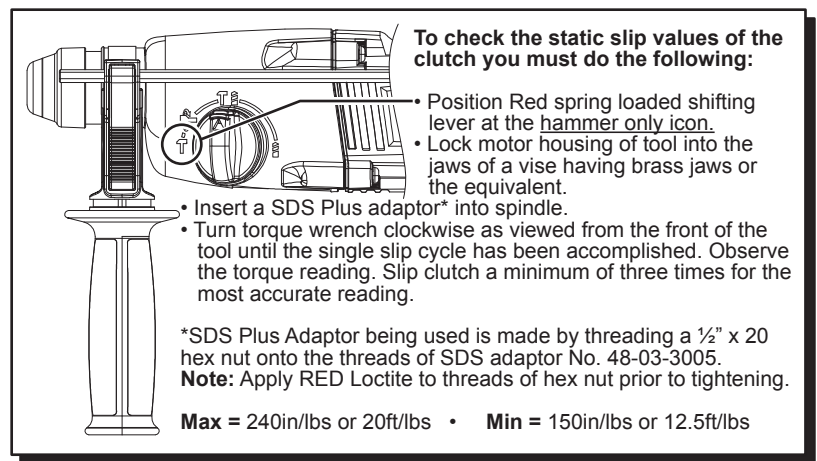


● = Component of the 14-46-5265 5262-21 Maintenance Service Kit

FIG.	PART NO.	DESCRIPTION	NO. REQ.
10m	45-88-2115	Washer	(1)
10n	40-50-1721	Clutch Spring	(1)
10p	32-75-1831	2nd Stage Gear	(1)
10q	-----	Clutch Plate	(1)
10r	-----	Steel Ball	(6)
10s	44-90-0216	● C-Ring (Thicker than 10t)	(1)
10t	44-90-0215	● C-Ring	(1)
11	45-88-0026	Washer	(1)
12	45-56-0037	Striker Assembly	(1)
12a	34-40-1511	● O-Ring	(1)
12b	-----	Striker	(1)
13	44-62-0058	Piston	(1)
14	45-88-5200	● Washer	(2)
15	44-60-0033	Wrist Pin	(1)
16	06-81-5383	M4 x 35mm Pan Hd. Plast. T-20 Screw	(4)


LUBRICATION NOTES: Type 'S2' Grease No. 49-08-5262, 1.4 oz. / 40g tube (2 included) Approximately 2.1 oz. / 60g needed







Lubrication Note: MILWAUKEE recommends that scheduled maintenance of this Rotary Hammer include lubrication replacement, and replacement of vital O-rings and gaskets *at each carbon brush change*. Doing so will prolong the life of the hammer by reducing wear to gears and mechanism parts. The carbon brushes and armature commutator in this MILWAUKEE Rotary Hammer are designed and matched for many hours of reliable performance.

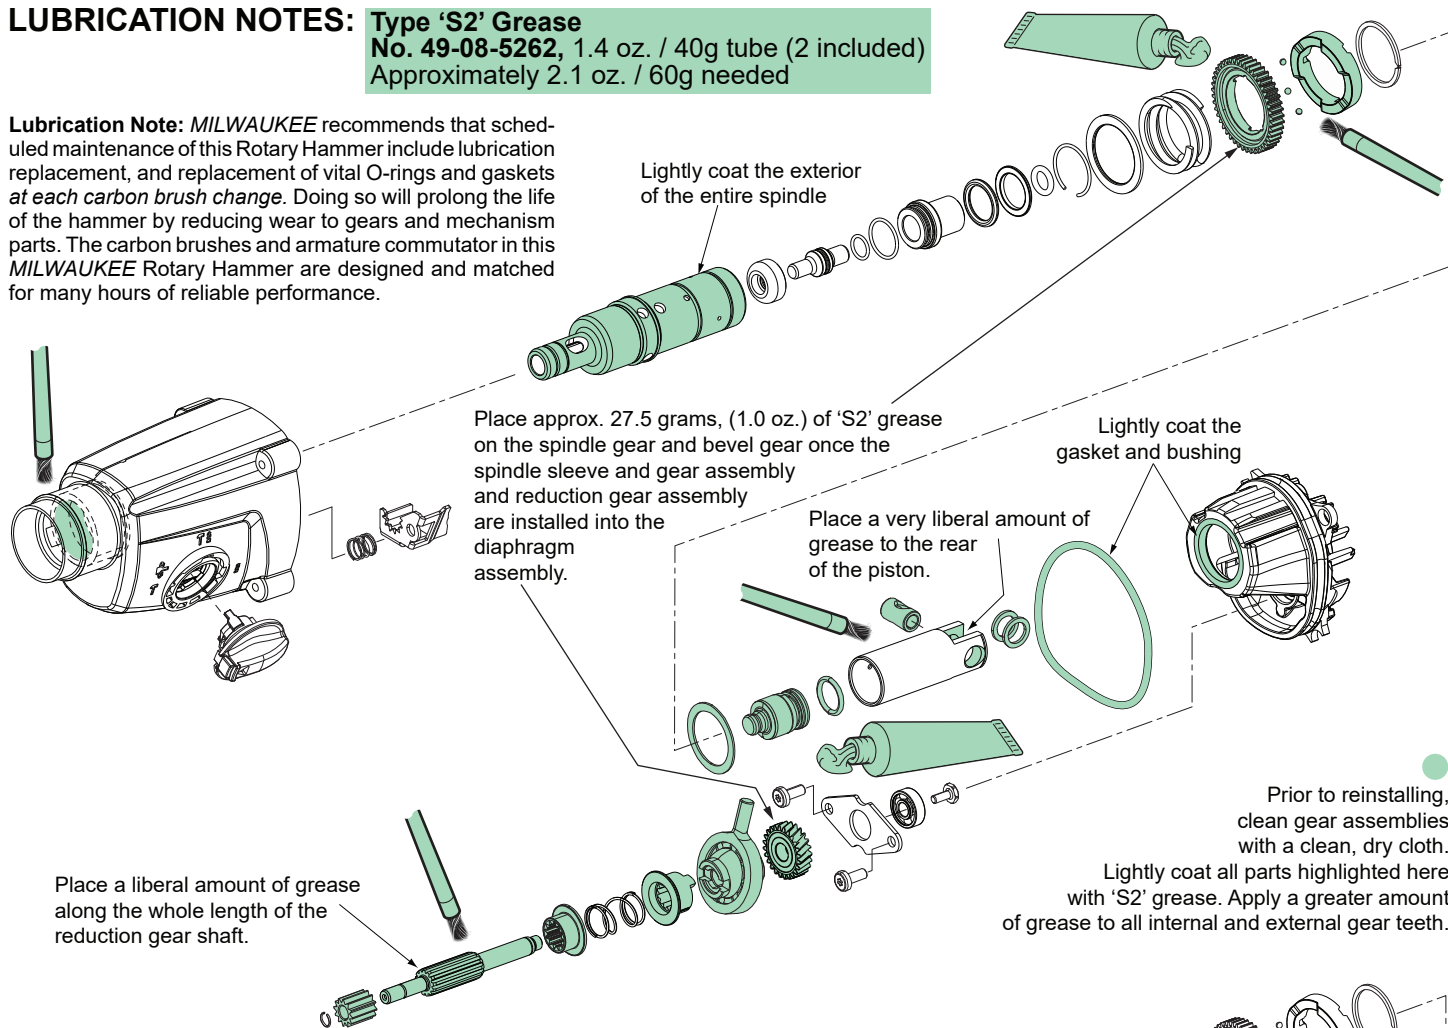

LUBRICATION NOTES: Type 'Q2' Grease No. 49-08-5355, 2.8 oz. / 80g tube Approximately .3 oz. / 8.7g needed



Lightly coat all parts highlighted here with 'Q2' grease unless directed otherwise.

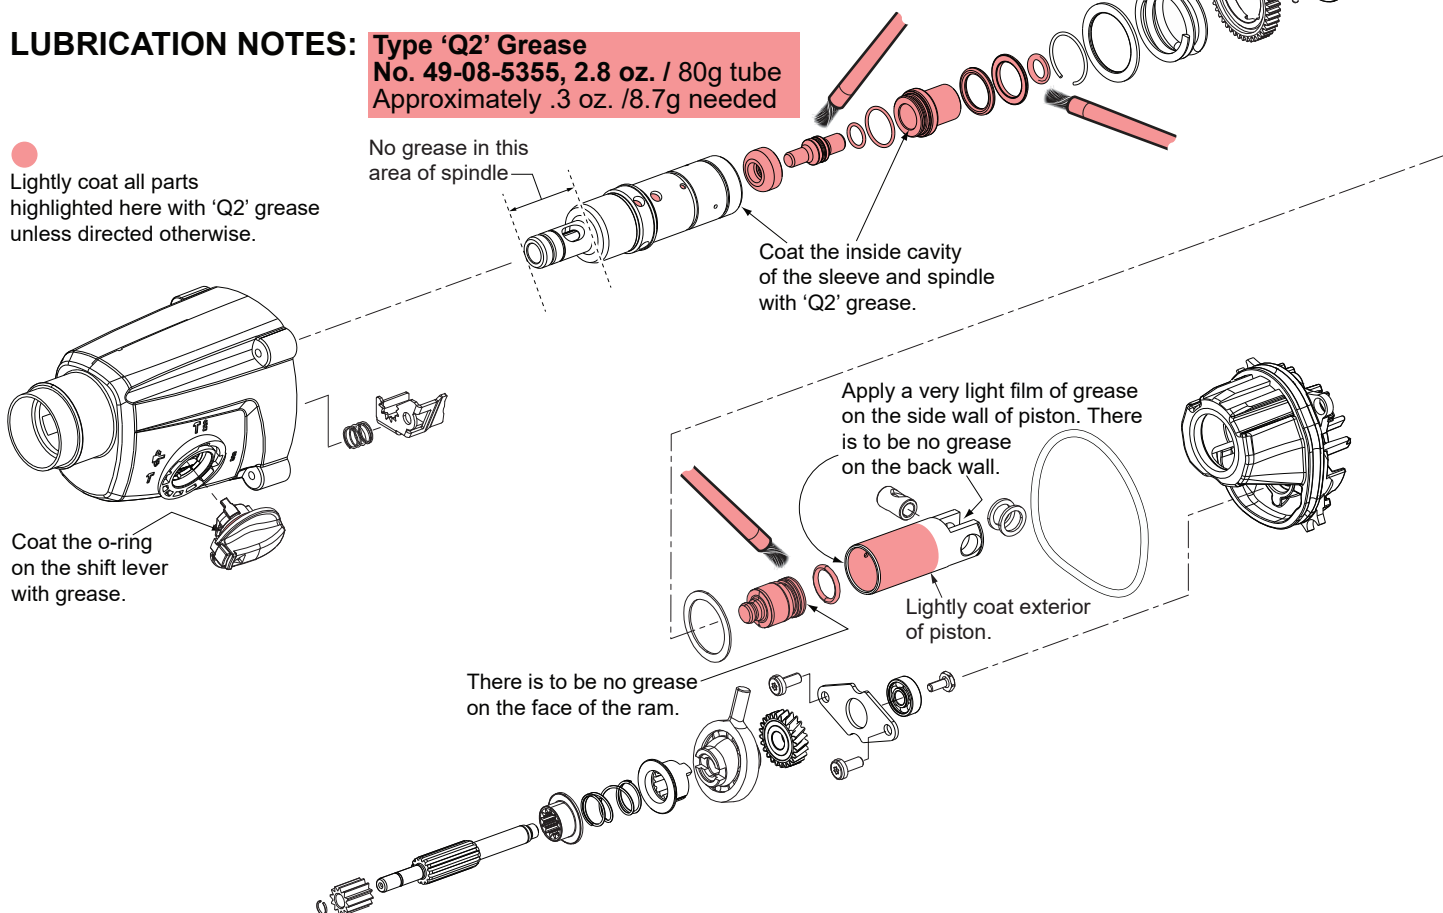

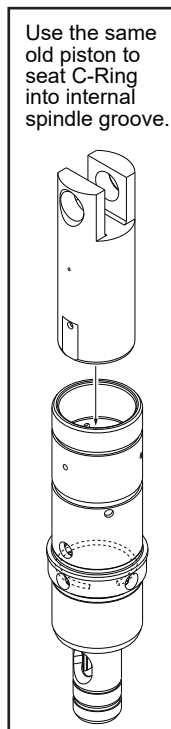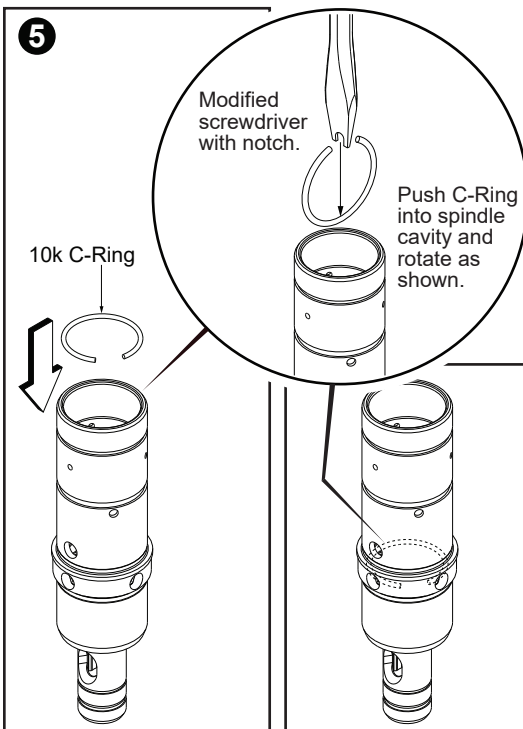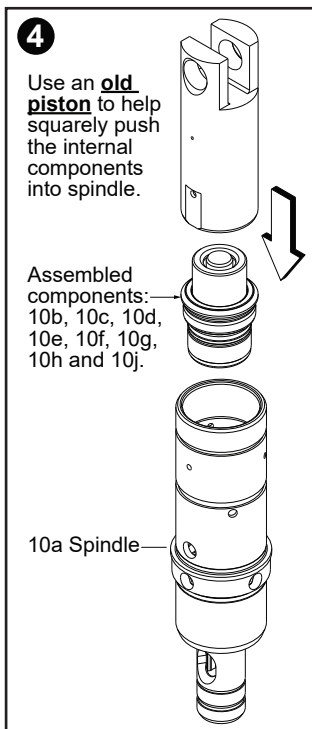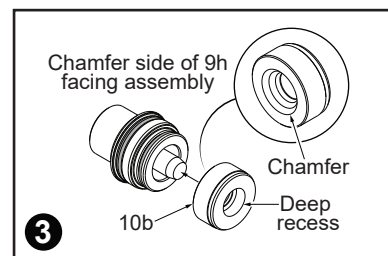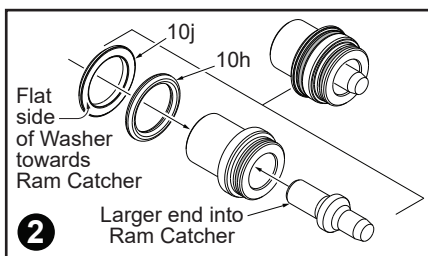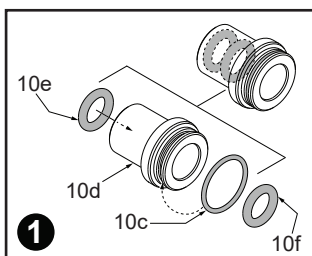

Assembly of internal Spindle components:

1. Lubricate Ram Catcher and O-Rings. Assemble O-Rings onto and into Ram Catcher.
2. Assemble Anvil Assembly into Ram Catcher Assembly (large end into Ram Catcher as shown).
3. Place the chamfered end of the Stop Washer over the small end of the Anvil.
4. Place the assembled components from step 4 into the cavity of an old piston as shown. Use the old piston as an aid to push the assembled components deep into the Spindle cavity.
5. C-Ring (10k) will be used to secure internal components inside the spindle. *It is recommended to modify a flat blade screwdriver by filing or grinding a notch into the blade.* Place the C-Ring upright as shown with the opening of the ring straight up. Use the modified screwdriver to push the C-Ring down into the Spindle cavity. Rotate the C-Ring in the spindle cavity as shown. Place the old piston into the Spindle cavity and tap the piston with a mallet to secure the C-Ring in the groove.

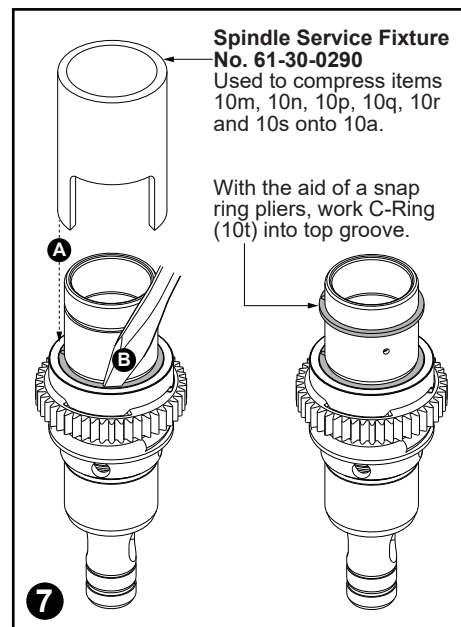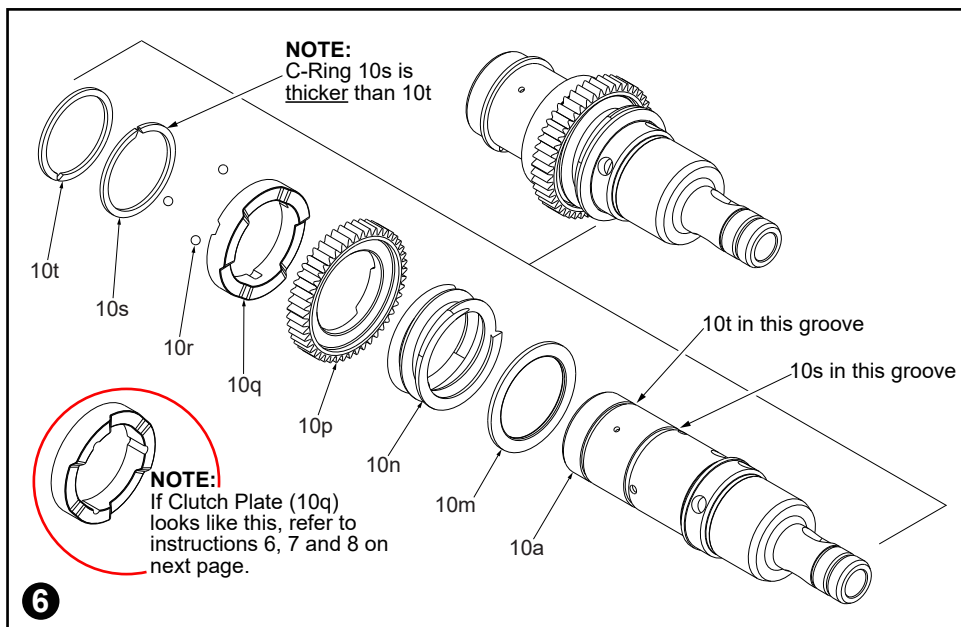

Assembly of external Spindle components:


6. Install Washer 10m and Spring 10n onto spindle. Lubricate and install the Clutch Gear 10p and Clutch Plate 10q onto the Spindle. Be sure to orient the part as shown and position with the three notches on the back of the plate over the holes in the spindle.

Place C-Ring 10s onto Spindle. (C-Ring 10s has a thicker cross section than C-Ring 10t.) With the aid of a snap ring pliers, work the C-Ring past the first spindle groove down to the other parts assembled onto spindle.

7. Place Spindle Service Fixture 61-30-0290 over the assembled parts and the Spindle. Position so the fixture rests on Clutch Plate 10q. Be sure the three notches are not covered. Place the fixture and spindle assembly in an arbor press and carefully compress the Clutch Spring enough to expose the three holes in the Spindle. As an aid, put a dab of grease on your finger to pick up and place the three Steel Balls 10r into the three small holes on the Spindle just above Clutch Plate. Ensure the notches in the Clutch Plate are aligned with the Steel Balls.

While compressed **A**, use a screwdriver **B** to work C-Ring 10s into the Spindle groove. Ensure the Steel Balls are in place and slowly retract the arbor press. The Clutch Plate should slide over the Steel Balls until it is in contact with the C-Ring.

Place C-Ring 10t onto Spindle. With the aid of a snap ring pliers, work the C-Ring into the first spindle groove and snap into place.

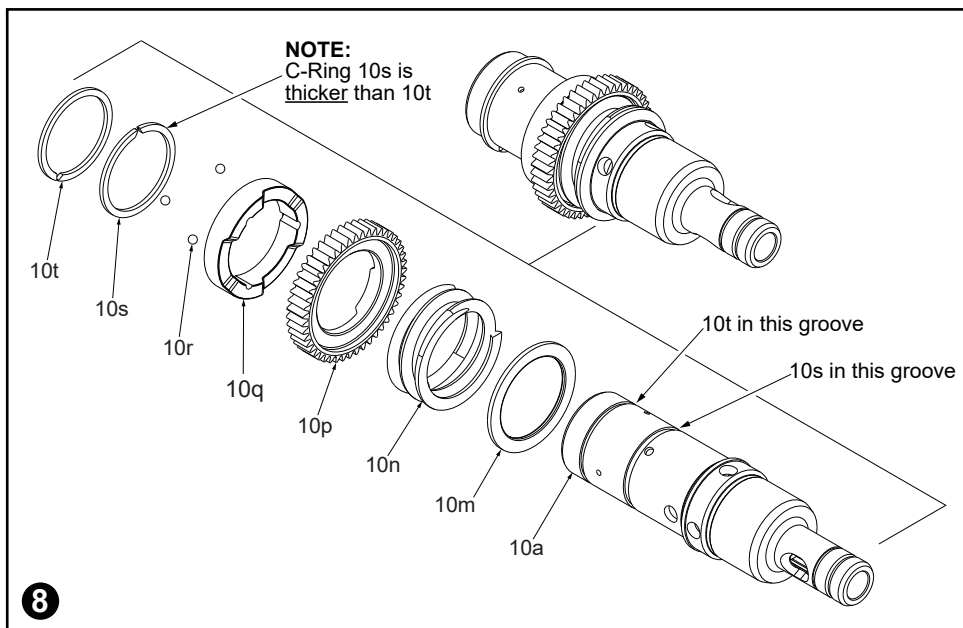

Assembly of external Spindle components:

8. Install Washer 10m and Spring 10n onto spindle. Lubricate and install the Clutch Gear 10p onto the Spindle 10a. Be sure to orient the part as shown with the three flats on the Clutch Gear centered over the holes in the spindle.
9. Place Spindle Service Fixture 61-30-0290 over the assembled parts and the Spindle. Position so the fixture rests on the Clutch Gear 10p. Be sure the three holes on the Spindle are not covered. Place the fixture and spindle assembly in an arbor press and carefully compress the Clutch Spring enough to expose the three holes in the Spindle.

As an aid, put a dab of grease on your finger to pick up and place the three steel balls 10r into the three small holes on the Spindle just above the Clutch Gear.



Remove the Spindle from the arbor press.


10. Lubricate and install the Clutch Plate 10q onto the Spindle. Be sure to orient the part such that three inside notches on the plate cover the Steel Balls in the Spindle. Place the C-Ring 10s onto the Spindle. (**NOTE:** C-Ring 10s has a thicker cross-section than C-Ring 10t). With the aid of a snap ring pliers, work the C-Ring past the first spindle groove, down to the other parts assembled onto the spindle.

Place Spindle Service Fixture 61-30-0290 over the assembled parts and the Spindle. Place the fixture and spindle assembly in an arbor press and carefully compress the Clutch Spring enough to expose the C-Ring groove in the Spindle.

While compressed, use a flat blade screwdriver to work C-Ring 10s into the spindle groove. Ensure that the Steel Balls are still in the spindle. Slowly retract the arbor press. The Clutch Plate should slide over the Steel Balls until it is in contact with the C-Ring.

With the aid of a snap ring pliers, work C-Ring 10t into top groove of Spindle.

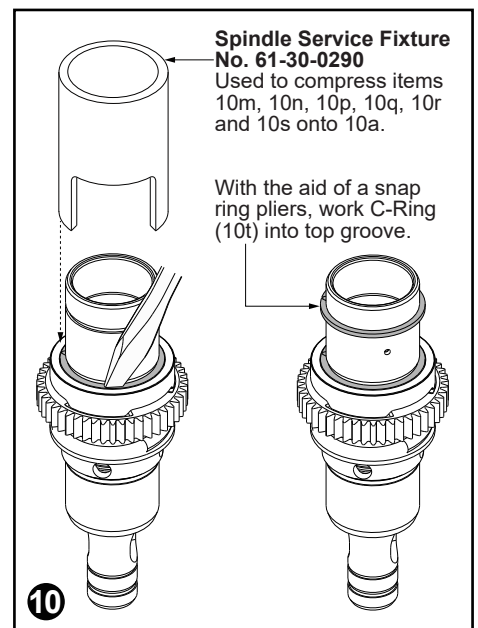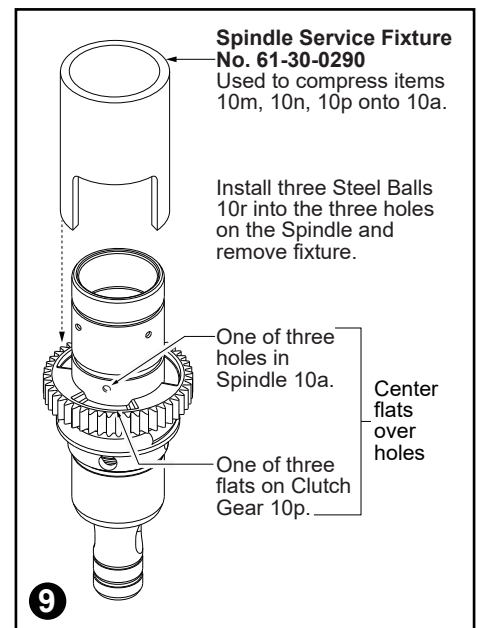

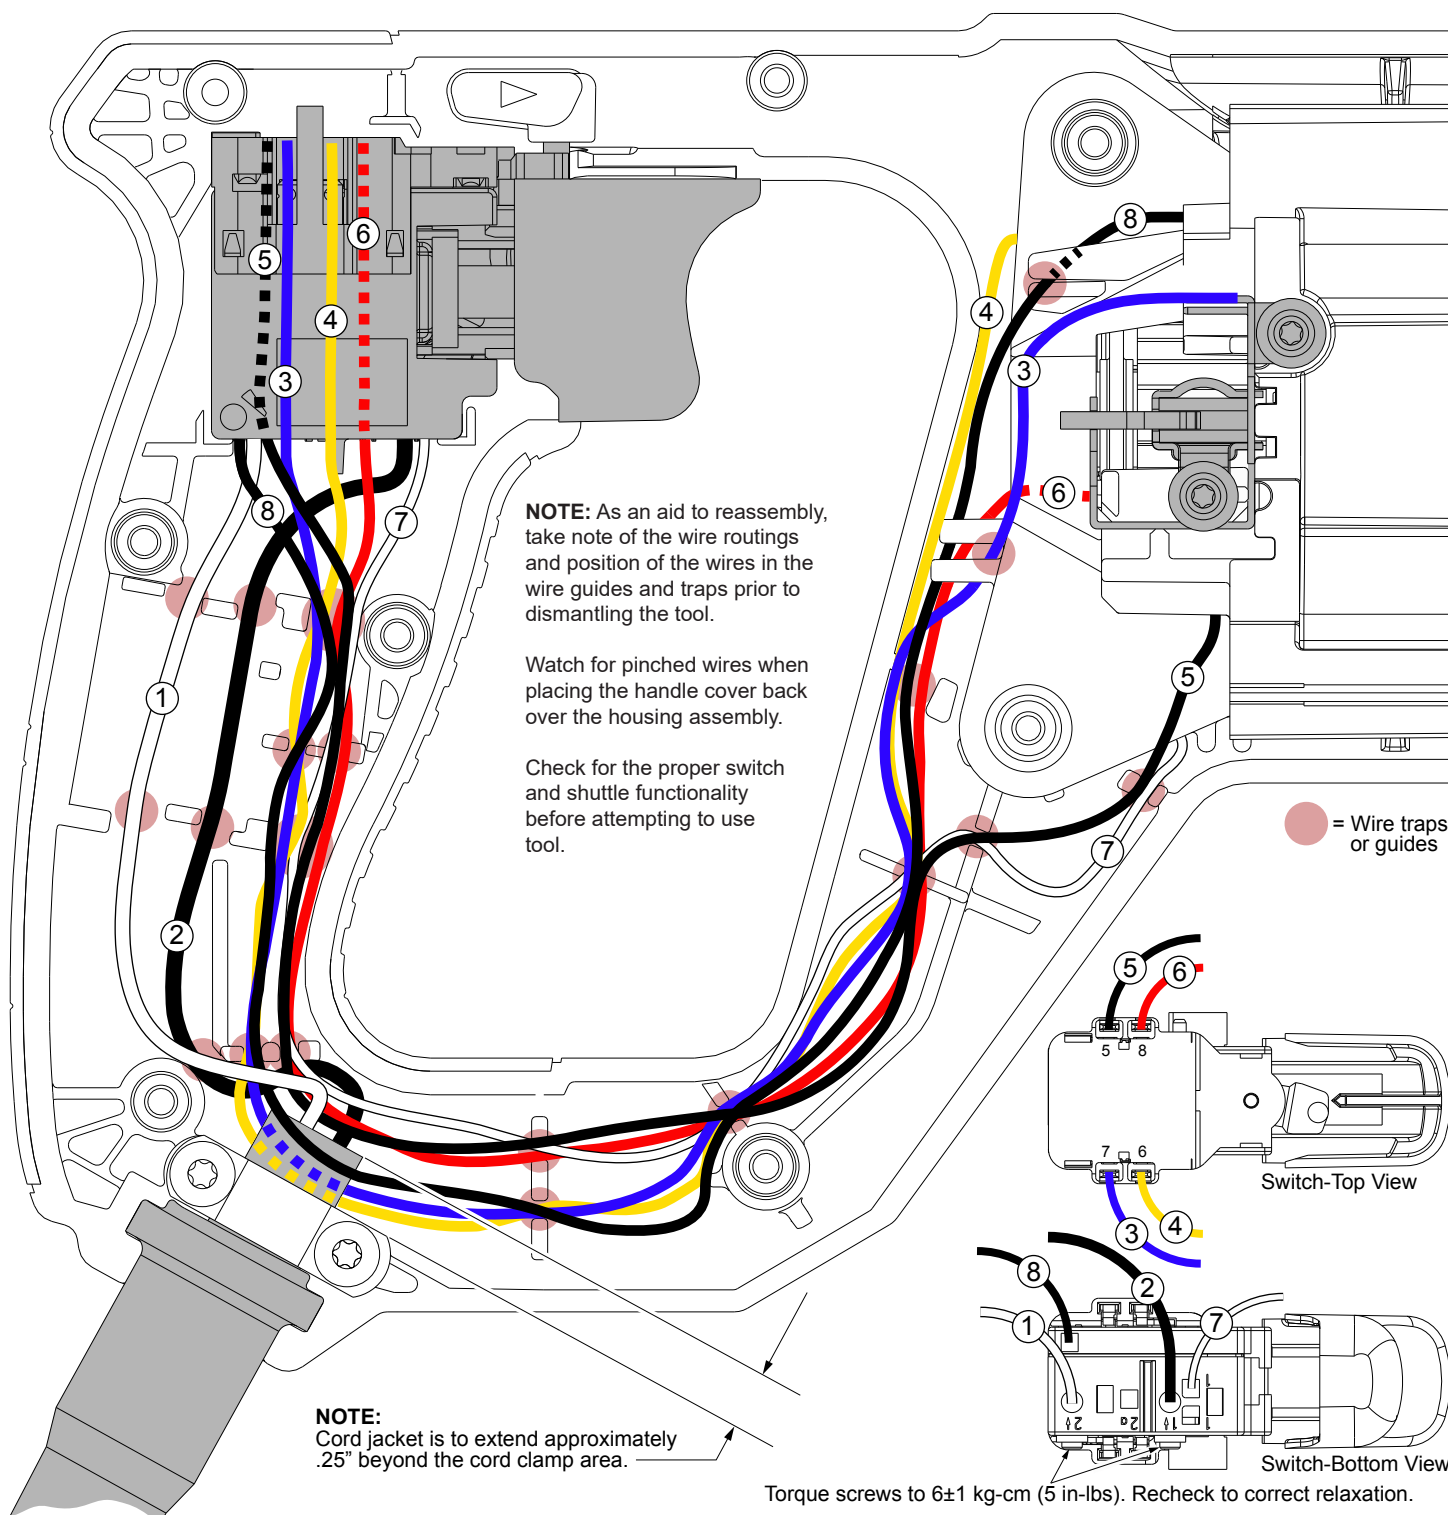

WIRING SPECIFICATIONS

Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation
1	White	-----	-----	Component of cord set. Connect to '2↓' position on bottom of switch.
2	Black	-----	-----	Component of cord set. Connect to '1↓' position on bottom of switch.
3	Blue	23-94-0037	-----	Connect to position '7' on right side of switch and the right brush holder.
4	Yellow	-----	-----	From top left field coil to position '6' on right side of switch.
5	Black	-----	-----	From bottom right field coil to position '5' on left side of switch.
6	Red	23-94-0033	-----	Connect to position '8' on switch and the left brush holder.
7	White	-----	-----	From bottom left field coil to position '1' on bottom of switch.
8	Black	-----	-----	From top right field coil to '2' on bottom of switch.